

Operator Manual



This manual is based on standard specifications. Therefore, application of this manual may depend on the country standards or customer specifications.


You can help to improve this manual by calling attention to errors and by recommending improvements. Please convey your comments to the nearest Ishida Company regional representative. **Thank you!**

Copyright © 1997 by Ishida Co., Ltd. All Rights Reserved.


No part of this manual may be reproduced in any form, by mimeograph or any other means, without written permission of the publisher.




CAUTIONS FOR USE

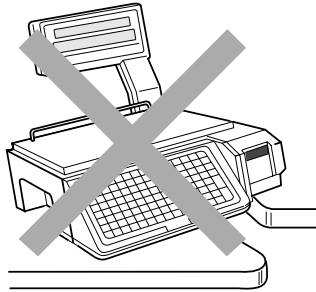


- Always operate the scale on a level surface.

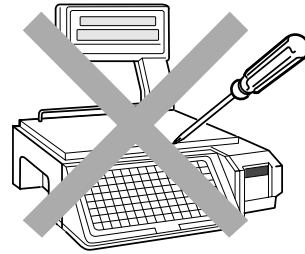


- Do not disassemble the scale.

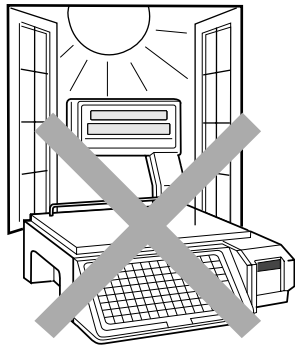


- Do not expose the scale to direct sunlight for long periods.

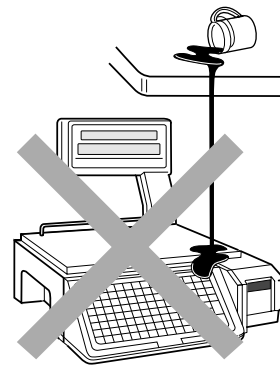


- Do not allow any liquids to come into contact with the scale or terminal.

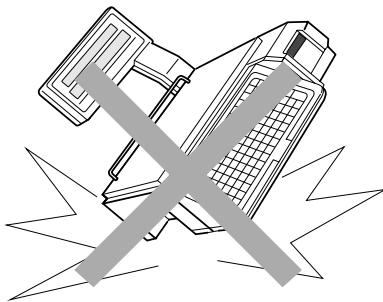

- Do not drop or apply a strong shock to the scale.

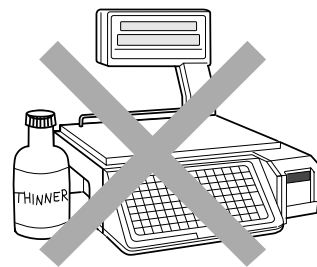

- When cleaning the scale, only use a soft dry cloth or a cloth wetted with a neutral cleanser. Never use thinner or other volatile liquids.

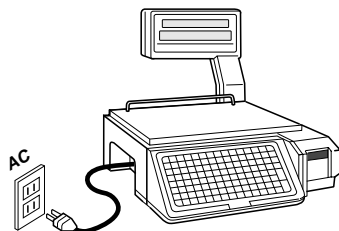

Always operate the scale with the same rated AC power supply shown on the specification plate.



SAFETY CONSIDERATIONS

To ensure safe operation, the general safety considerations below must be followed.

Grounding

This instrument is a Class 1 device which requires protective grounding for safe operation.

To avoid potential shock hazards, a protective grounding conductor for the instrument must be securely connected to the main grounding provision by qualified service personnel.

Do not remove covers or enclosures

To avoid personal injury and shock, do not open or remove any covers or enclosures of the instrument unless specified in the manual.

Do not perform unspecified maintenance

For your personal safety, do not perform any maintenance procedures which are not specified in the manual.

Disconnect power supply before servicing

To ensure your personal safety, disconnect the power supply before servicing.

CONTENTS

Chapter 1: Overview

1.1 Appearance	2
1.2 Operator Display	2
1.3 Operation Keys	3
1.4 Loading Label/Receipt Roll	6
1.5 Pre-operation Inspection	7
1.6 Power On	8

Chapter 2: Basic Operation for Label Application

2.1 Label Operation Flow	10
2.2 Counter Sale of Fixed-price Item	11
2.3 Prepack for Fixed-price Item	12
2.4 Label Batch Print	13
2.5 Pack Count Sub-total	14

Chapter 3: Basic Operation for Receipt Application

3.1 Bouquet Operation Flow	16
3.2 Fixed-price Item Sale	17
3.3 Subtotal Discount	18

Chapter 4: On-demand Operation

4.1 Mark Down Functions	22
4.2 Voiding the Last Transaction	23
4.3 Changing from Weighed Item to Fixed-price Item	23
4.4 Fixed Weight Overrde	23
4.5 Date Override	23
4.6 Save	24
4.7 Logo Print	24
4.8 Store Name Print	24
4.9 Care (Extra) Text Print	25
4.10 Care (Coupon) Text Print	25
4.11 POP Text Print	25

Chapter 5: Subtraction

5.1 Subtraction	28
------------------------------	-----------

Chapter 6: Troubleshooting

6.1 Error Messages	30
6.2 How to Release Error Conditions	31
6.3 How to Replace Fuse	31
6.4 Other Problems	31


CHAPTER 1

OVERVIEW


Contents

1.1	Appearance	2
1.2	Operator Display	2
1.3	Operation Keys	3
1.3.1	Operation Key Sheet	3
1.3.2	Basic Function Keys.....	4
1.3.3	Additional Function Keys.....	5
1.3.4	Preset Key Examples	5
1.4	Loading Label/Receipt Roll.....	6
1.5	Pre-operation Inspection	7
1.6	Power On.....	8

1.1 Appearance

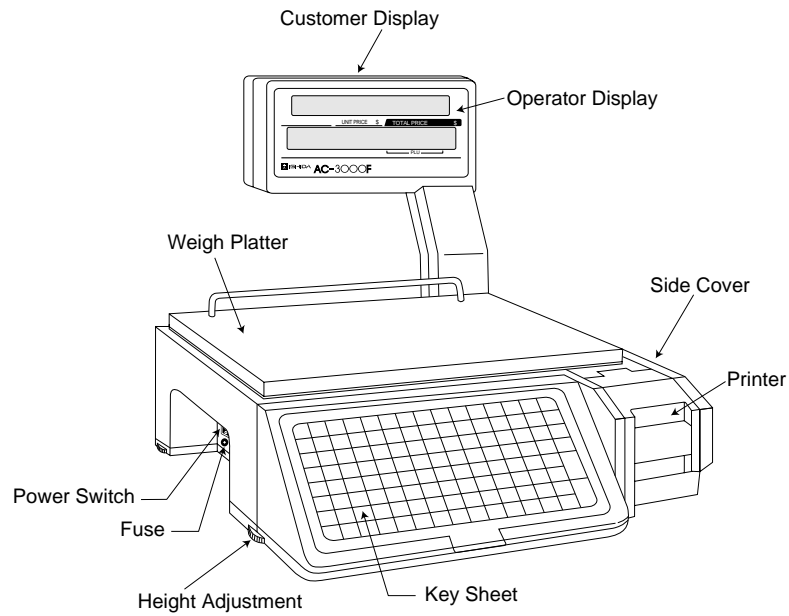

1.2 Operator Display

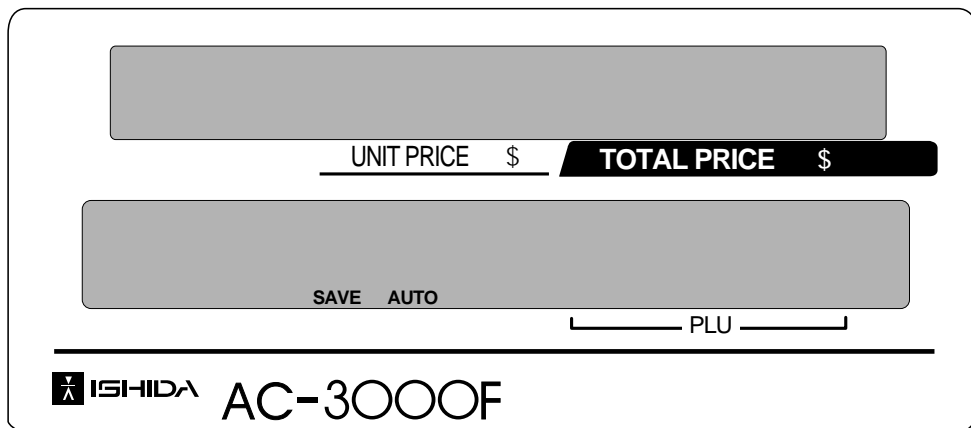



Indicators

SAVE : Lights when the SAVE mode is used.

AUTO: Lights when the AUTOMATIC PRINT (prepack) mode is used.

1.3 Operation Keys

1.3.1 Operation Key Sheet

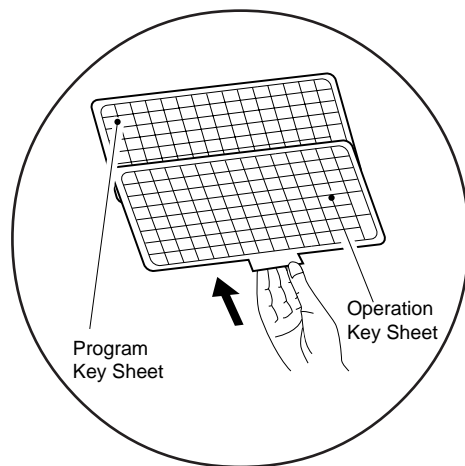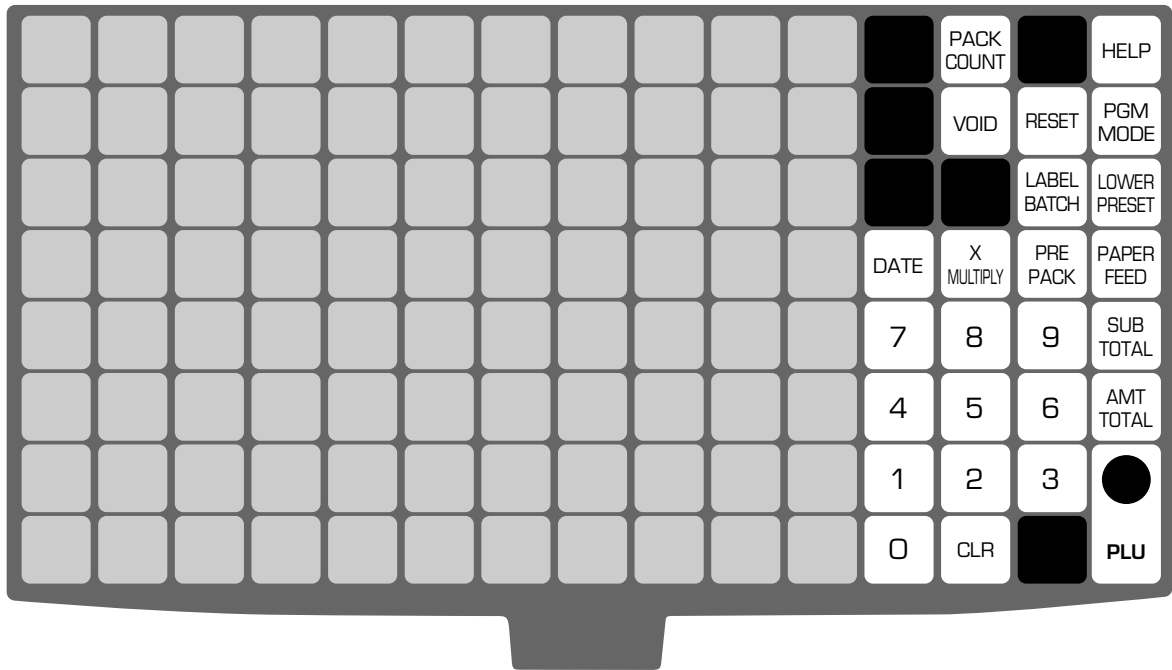

Insert the Operation Key Sheet over the Program Key Sheet.



Preset Keys




Additional Function Keys

Six of the following options can be preset by the dealer in accordance with the customer's request.

- DATE/TIME
- STORE NAME
- LOGO
- 1st CARE (EXTRA) TEXT
- 2nd CARE (COUPON) TEXT
- POP TEXT
- FIXED PRICE
- DISCOUNT
- AMOUNT DISCOUNT
- PERCENTAGE DISCOUNT
- SAVE
- PRINT
- FIXED WEIGHT
- FORMAT
- BOUQUET

1.3.2 Basic Function Keys

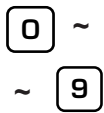

NUMERIC ENTRY

Keys 0 through 9 are used to enter numeric data.



PREPACK

Used to switch between auto printing mode and manual printing mode.



CLEAR

Used to cancel incorrectly entered numeric data. Also used to stop printing labels. Also used to return to the operation mode.



PROGRAM MODE

Used to enter the subtraction mode after a 4-digit password has been entered. Also used to exit the subtraction mode.



LABEL BATCH

Used to issue batches of labels.



TEMPORARY DATE

Used to temporarily change the current date.



LOWER PRESET

Used to access the second level of data programmed to the preset keys.



VOID

Used to cancel the previous item registration.



MULTIPLY

Used to multiply the entered quantity of fixed-price items.



HELP

Used to display an explanation (up to 32 letters) of each function.



PACK COUNT SUB-TOTAL

Used to issue a label that shows the number of labels (packs), total weight and amount which have been transacted since this key was last pressed.



RESET

Used to forcibly exit a particular mode and return to the initial status of the operation mode.



PAPER FEED

Used to advance labels/receipts to the correct printing position.



SUBTOTAL

Used to obtain the subtotal for customized bouquets.



PLU SELECT






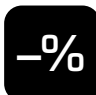
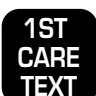








Used to access PLU data. Also used to display the tare weight.










AMOUNT TOTAL

Used to finalize the cash payment transaction, and issue labels.

1.3.3 Additional Function Keys

	DATE/TIME Used to display the current date and time for a few seconds.		DISCOUNT Used to enter a special selling price.
	STORE NAME Used to change the store name corresponding to the entered number.		AMOUNT DISCOUNT Used to subtract the entered amount from the selling price.
	LOGO Used to access a logo message corresponding to the entered number after the PLU has been accessed.		PERCENT DISCOUNT Used to subtract the entered percentage from the selling price.
	1st CARE (EXTRA) TEXT Used to print the care instruction on the first the label.		SAVE Used to save PLU data until the SAVE key is pressed again.
	2nd CARE (COUPON) TEXT Used to print the care instruction on the second the label.		PRINT Used to print labels. Also used to start batch printing.
	POP TEXT Used to access the POP text corresponding to the entered number after the PLU has been accessed.		FORMAT Used to select the lable format (1 ~ 4).
	FIXED WEIGHT Used to temporarily change a fixed weight of the fixed price item.		BOUQUET Used to add a handling charge for a customized bouquet.
	FIXED PRICE Used to temporarily change from weight item sales to fixed-price item sales. Also used to enter a new fixed price.		

1.3.4 Preset Key Examples

	CHECK Used to finalize check payment transactions.		PRESET AMOUNT DISCOUNT Used to access preset discount amount.
	CARD Used to finalize credit card payment transactions.		PRESET CHARGE (%) Used to add, by percentage, the handling charge.
	PRESET PLU Used to access PLU data (from among two levels).		PRESET CHARGE (AMOUNT) Used to add, by monetary amount, the handling charge.
	PRESET PERCENT DISCOUNT Used to access preset discount percentage.		


1.4 Loading Label/Receipt Roll

1. Make sure that the power is off.



2. Open the side cover.
3. Pull the release lever to raise the printer head.
4. Load the new roll onto the holding shaft.



Note: Before installing the label roll, remove labels from the first 30 cm (12 inches) of backing paper.

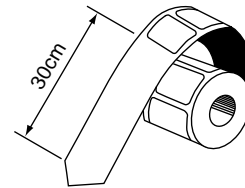


5. Thread the paper through positions as shown in the diagram.

Check that the backing paper is:

- threaded properly under the guide shaft.
- threaded properly through the label sensor.
- threaded properly over the peeling bar, making sure it passes through the groove.

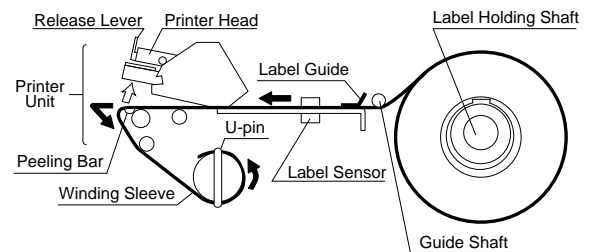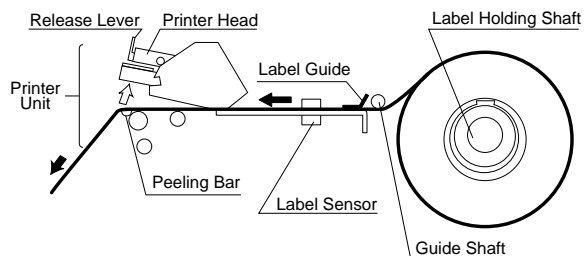


6. When the label needs to be wound up, wind the end of the backing paper around the winding sleeve and secure it with the U-pin as shown in the diagram.

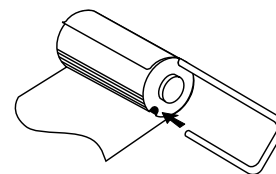

7. Push the printer head down until it locks securely.

8. Close the side cover.

9. Turn on the power and press the PAPER FEED key to advance the label/receipt to the correct printing position.

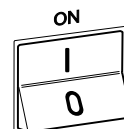

1.5 Pre-operation Inspection

In order to maintain optimum scale performance, perform the following inspection before starting daily operations.




Always turn off the power switch when performing this inspection.

1. Make sure that the power is off.




2. Check that the scale and the level device aperture are clean and free of foreign matter, label adhesive, etc. to make the scale level. If not, wipe any soiled areas with a dry cloth.
3. In order to maintain good printing quality, clean the thermal head at least once a week with a cotton swab dipped in cleaning fluid.

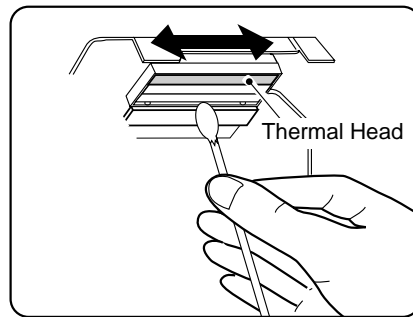




Do not use metal tools to clean the thermal head as they may damage the head surface.

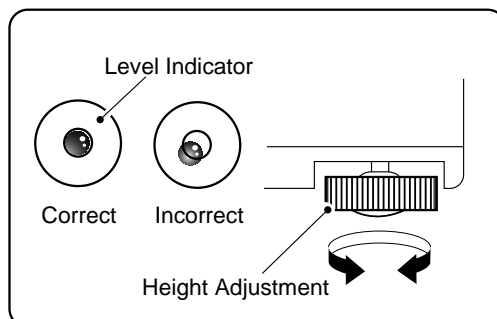4. Adjust the scale to level by using the height adjustment feet.



5. Make sure the label/receipt amount is sufficient.

1.6 Power On

<p>1 Plug in AC power cord.</p> <ul style="list-style-type: none">• Make sure that the power cord is plugged into the AC outlet.	
<p>2 Turn on the power switch.</p>	
<p>3 Initial display.</p> <ul style="list-style-type: none">• Make sure that nothing is on the weigh platter, and that the initial display appears.	 <p>Initial display</p>

CHAPTER 2



BASIC OPERATION FOR LABEL APPLICATION

Contents


2.1	Label Operation Flow	10
2.1.1	Start-up Operations	10
2.1.2	Operation Flow	10
2.2	Counter Sale of Fixed-price Item ..	11
2.3	Prepack for Fixed-price Item	12
2.4	Label Batch Print	13
2.5	Pack Count Sub-total	14

2.1 Label Operation Flow



 


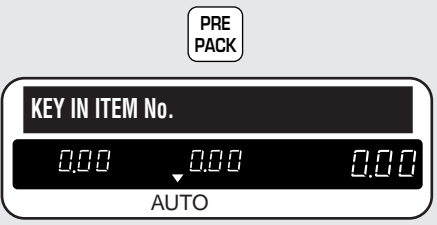

2.1.1 Start-up Operations
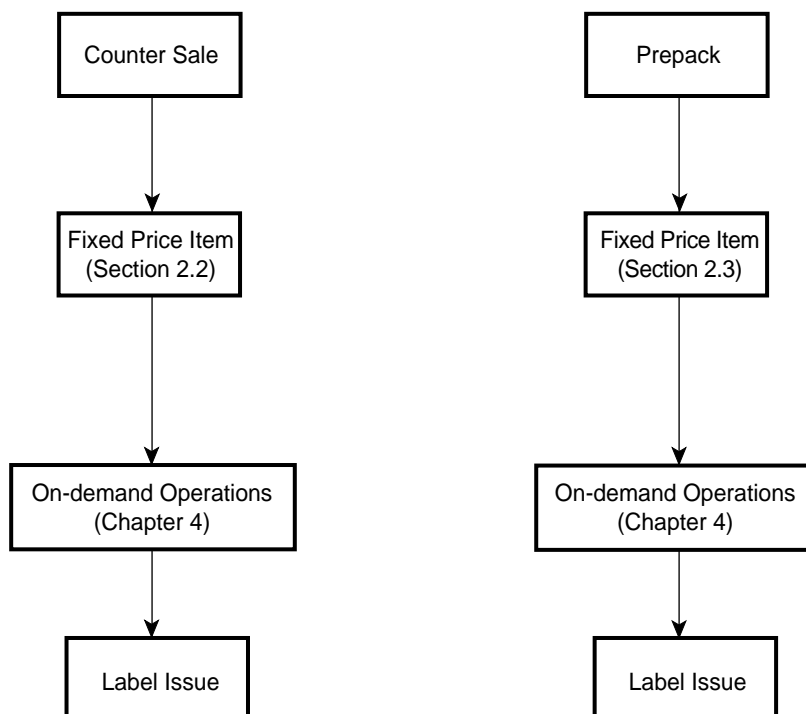
<p>(1) Label issuing mode</p> <ul style="list-style-type: none">When automatic printing is desired, press the PREPACK key to turn on the AUTO indicator, if it is not lit.	 <p>The terminal display shows a 'PRE PACK' indicator at the top. Below it, the screen displays 'KEY IN ITEM No.' followed by three '0.00' values. At the bottom, the word 'AUTO' is lit.</p>
<p>(2) Receipt issuing mode</p> <ul style="list-style-type: none">Check that the AUTO indicator is not lit. <p>Note: If the AUTO indicator is lit, press the PREPACK key to turn off the indicator.</p>	 <p>The terminal display shows a 'PRE PACK' indicator at the top. Below it, the screen displays 'KEY IN ITEM No.' followed by three '0.00' values. The word 'AUTO' is not lit.</p>

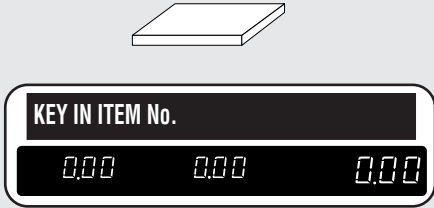



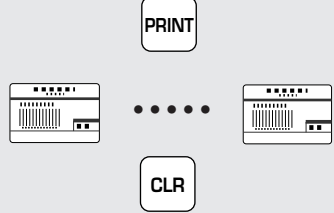
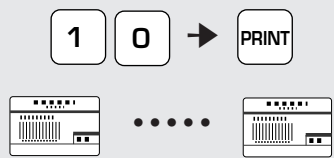
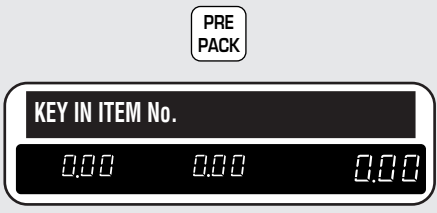
2.1.2 Operation Flow



2.2 Counter Sale of Fixed-price Item


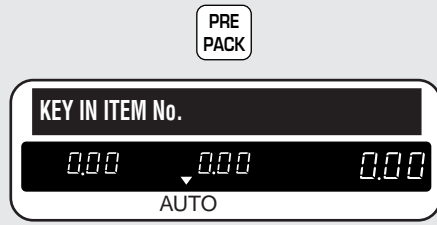




<p>1 Initial display</p> <ul style="list-style-type: none"> • Check that nothing is on the weigh platter. • Check that the initial display appears on the screen. • Check that the AUTO indicator is not lit. <p>Note: If the AUTO indicator is lit, press the PREPACK key to turn off the indicator.</p>	
<p>2 Enter the PLU.</p> <p>▪ Entering PLU number</p> <ul style="list-style-type: none"> • Enter the PLU number and press the PLU key. <p>Example: PLU no. = 450 Fixed price = \$2.20</p> <p>▪ Pressing PLU (preset) key</p> <ul style="list-style-type: none"> • Press the preset key in which the PLU number is set. <p>Note: When accessing the lower preset PLU number, press the LOWER PRESET key prior to pressing the preset key.</p>	 <p>Example: When accessing PLU15</p>  <p>Example: When accessing PLU95</p> 
<p>3 Multiply the quantity, if any.</p> <ul style="list-style-type: none"> • When selling more than one of the same item, enter the quantity and press the MULTIPLY key. • Otherwise, go to the next step. 	
<p>4 Issue the label.</p> <p>▪ Multiple labels</p> <ul style="list-style-type: none"> • Enter the number of labels, and press the PRINT key. <p>Note: Press the CLEAR key once to temporarily stop printing. To continue printing, press the PRINT key again.</p> <p>▪ One label</p> <ul style="list-style-type: none"> • Press the PRINT key. 	<p>Example: Ten labels</p>  <p>Example: One label</p> 

2.3 Prepack for Fixed-price Item

<p>1 Enter the prepack mode.</p> <ul style="list-style-type: none"> • Check that nothing is on the weigh platter. • Check that the initial display appears on the screen. • Press the PREPACK key to turn on the AUTO indicator, if it is not lit. 	
<p>2 Enter the PLU.</p> <p>▪ Entering PLU number</p> <ul style="list-style-type: none"> • Enter the PLU number and press the PLU key. <p>Example: PLU no. = 450 Fixed price = \$2.20</p> <p>▪ Pressing PLU (preset) key</p> <ul style="list-style-type: none"> • Press the preset key in which the PLU number is set. <p>Note: When accessing the lower preset PLU number, press the LOWER PRESET key prior to pressing the preset key.</p>	 <p>Example: When accessing PLU15</p>  <p>Example: When accessing PLU95</p> 
<p>3 Print labels.</p> <p>▪ Continuous issue</p> <ul style="list-style-type: none"> • Press the PRINT key to continuously issue labels. • Press the CLEAR key to stop printing. <p>▪ Specified number of labels</p> <ul style="list-style-type: none"> • Enter the number of labels, and press the PRINT key. <p>Note: Press the CLEAR key once to temporarily stop printing. To continue printing, press the PRINT key again.</p>	 <p>Example: Ten labels</p> 
<p>4 Exit the prepack mode.</p> <ul style="list-style-type: none"> • Press the PREPACK key. • The AUTO indicator will turn off. 	



2.4 Label Batch Print

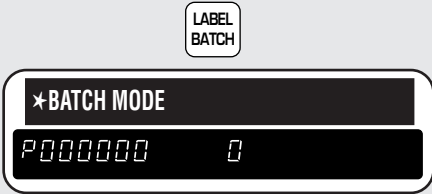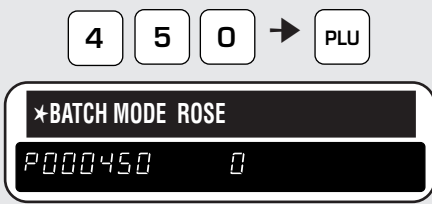This function presets the number of fixed-price labels (max. 20 PLUs) to be printed. This function is only available for fixed-price items.
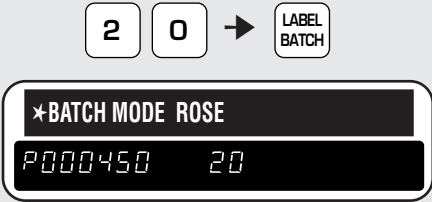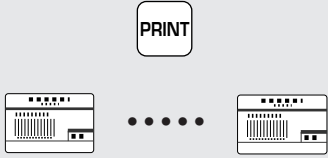
<p>1 Enter the label batch print mode.</p> <ul style="list-style-type: none"> Press the LABEL BATCH key to enter the label batch print mode. 	
<p>2 Enter the PLU.</p> <ul style="list-style-type: none"> Entering PLU number <ul style="list-style-type: none"> Enter the PLU number and press the PLU key. Example: PLU no. = 450 Pressing PLU (preset) key <ul style="list-style-type: none"> Press the preset key in which the PLU number is set. <p><i>Note:</i> When accessing the lower preset PLU number, press the LOWER PRESET key prior to pressing the preset key.</p> 	 <p>Example: When accessing PLU15</p>  <p>Example: When accessing PLU95</p> 
<p>3 Enter the desired number of labels.</p> <ul style="list-style-type: none"> Enter the number of labels to be issued. (Max. 999) Press the LABEL BATCH key. 	<p>Example: Twenty labels</p> 
<p>4 Enter any other PLUs, if necessary.</p> <ul style="list-style-type: none"> Repeat steps 2 and 3 when labels for any other PLUs are needed. A maximum of 20 PLUs can be entered. 	
<p>5 Print labels.</p> <ul style="list-style-type: none"> Press the PRINT key. <p><i>Note:</i> Press the CLEAR key to temporarily stop printing. To continue printing, press the PRINT key again. To cancel batch, press CLEAR key again.</p>	

2.5 Pack Count Sub-total

This function is used to print the pre-packing information label, including the total quantity, total weight and total amount which have been issued since the last time the PACK COUNT key was pressed.
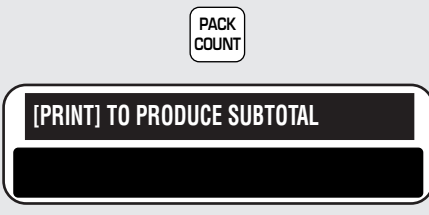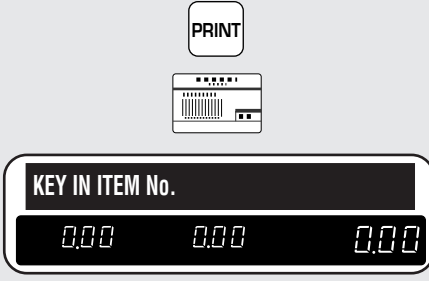
<p>1 Enter the pack count sub-total mode.</p> <ul style="list-style-type: none">• Press the PACK COUNT key.	 <p>The image shows a scale display with a 'PACK COUNT' button at the top. Below it, a message box displays '[PRINT] TO PRODUCE SUBTOTAL'.</p>
<p>2 Print the pack count sub-total.</p> <ul style="list-style-type: none">• Press the PRINT key.• The scale returns to the initial display after issuing pack count sub-total label.	 <p>The image shows a scale display with a 'PRINT' button at the top. Below it, a printed label is shown with a barcode and some text. The main display area shows 'KEY IN ITEM No.' followed by three digital readouts, each displaying '0.00'.</p>

CHAPTER 3



BASIC OPERATION FOR RECEIPT APPLICATION

Contents


3.1	Bouquet Operation Flow	16
3.1.1	Start-up Operations	16
3.1.2	Operation Flow	16
3.2	Fixed-price Item Sale	17
3.3	Subtotal Discount	18
3.3.1	Subtotal Amount Discount	18
3.3.2	Subtotal Percent Discount	18
3.3.3	Subtotal Special Price	18
3.3.4	Handling Charge (%)	19
3.3.5	Handling Charge (Amount)	19

3.1 Bouquet Operation Flow

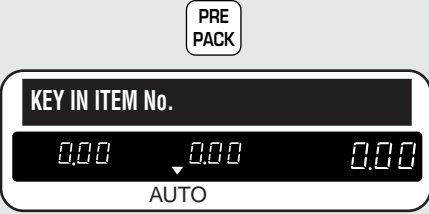


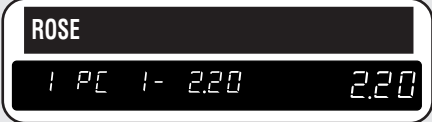




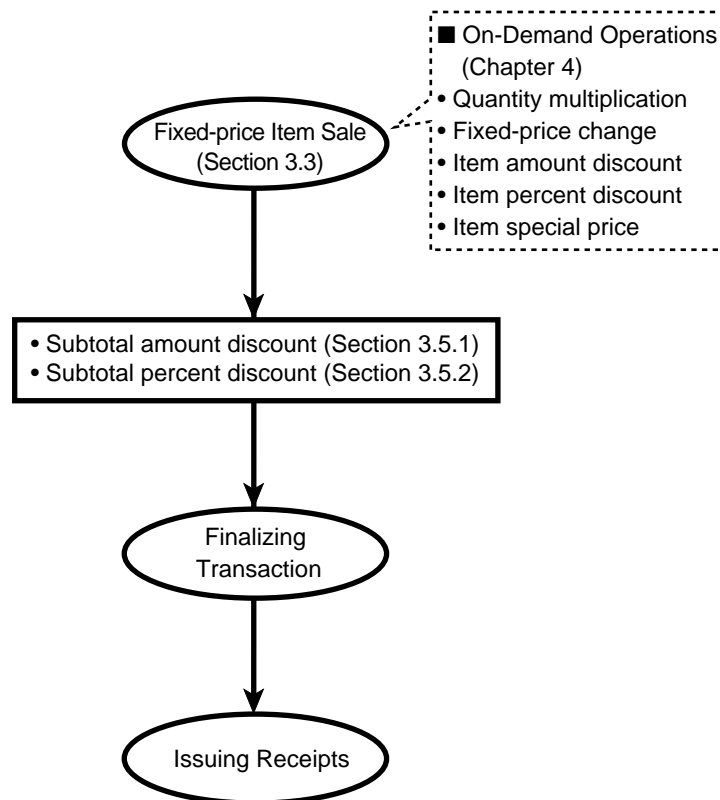


 



3.1.1 Start-up Operations

<p>(1) Label issuing mode</p> <ul style="list-style-type: none"> Press the PREPACK key to turn on the AUTO indicator, if it is not lit. 	
<p>(2) Customized bouquet issuing mode</p> <ul style="list-style-type: none"> Check that the AUTO indicator is not lit. <p>Note: If the AUTO indicator is lit, press the PREPACK key to turn off the indicator.</p>	

3.1.2 Operation Flow

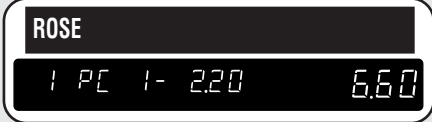

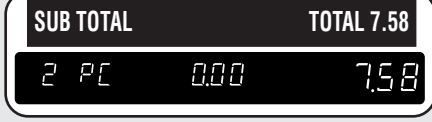

3.2 Fixed-price Item Sale



<p>1 Initial display</p> <ul style="list-style-type: none"> • Check that nothing is on the weigh platter. • Check that the initial display appears on the screen. • Check that the AUTO indicator is not lit. <p><i>Note: If the AUTO indicator is lit, press the PREPACK key to turn off the indicator.</i></p>	 
<p>2 Enter the PLU.</p> <p>▪ Entering PLU number</p> <ul style="list-style-type: none"> • Enter the PLU number and press the PLU key. <p>Example: PLU no. = 4 5 0 Fixed price = \$2.20</p> <ul style="list-style-type: none"> • Press the BOUQUET key to register an item. <p>▪ Pressing PLU (preset) key</p> <ul style="list-style-type: none"> • Press the preset key in which the PLU number is set. • Press the BOUQUET key to register an item. 	    <p>Example: When accessing PLU15</p> 
<p>3 Multiply the quantity, if any.</p> <ul style="list-style-type: none"> • When selling more than one of the same item, enter the quantity and press the MULTIPLY key and then press the BOUQUET key to register the multiple items. • Otherwise, go to the next step. 	 
<p>4 Repeat the item sale, if any.</p> <ul style="list-style-type: none"> • Repeat steps 2 and 3 for any other items. <p>Example: PLU no. = 4 8 0 Fixed price = \$0.98</p>	   
<p>5 Issue the receipt.</p> <ul style="list-style-type: none"> • Enter the amount tendered by the customer and press the AMOUNT TOTAL key. Then the change due will be calculated and the receipt will be issued. 	<p>Example: The customer pays \$10.00.</p>  

3.3 Subtotal Discount


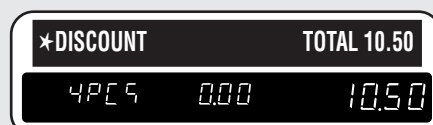
3.3.1 Subtotal Amount Discount

<p>1 Obtain the subtotal amount.</p> <ul style="list-style-type: none">Press the SUBTOTAL and BOUQUET keys.	<p style="text-align: center;">SUB TOTAL → BOUQUET</p> 
<p>2 Perform discount operation.</p> <ul style="list-style-type: none">Enter the discount amount and press the AMOUNT DISCOUNT key.	<p>Example: Discount amount = \$2.00</p> <p style="text-align: center;">2 0 0 → -\$</p> 



 

3.3.2 Subtotal Percent Discount

<p>1 Obtain the subtotal amount.</p> <ul style="list-style-type: none">Press the SUBTOTAL and BOUQUET keys.	<p style="text-align: center;">SUB TOTAL → BOUQUET</p> 
<p>2 Perform discount operation.</p> <ul style="list-style-type: none">Enter the discount percentage and press the PERCENT DISCOUNT key.	<p>Example: Discount rate= 5%</p> <p style="text-align: center;">5 → -%</p> 



 

3.3.3 Subtotal Special Price

<p>1 Obtain the subtotal amount.</p> <ul style="list-style-type: none">Press the SUBTOTAL and BOUQUET keys.	<p style="text-align: center;">SUB TOTAL → BOUQUET</p> 
<p>2 Perform special price operation.</p> <ul style="list-style-type: none">Enter the special price and press the DISCOUNT key.	<p>Example: Special price = \$10.50</p> <p style="text-align: center;">1 0 5 0 → DISCOUNT</p> 

3.3.4 Handling Charge (%)

<p>1 Obtain the subtotal amount.</p> <ul style="list-style-type: none"> Press the SUBTOTAL and BOUQUET keys. 	<div style="text-align: center;">  </div> <div style="text-align: center;">  </div>
<p>2 Add the handling charge.</p> <ul style="list-style-type: none"> Press the PRESET CHARGE (%) Key. 	<p style="text-align: center;">Example: Charge = 10%</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div>

3.3.5 Handling Charge (Amount)

<p>1 Obtain the subtotal amount.</p> <ul style="list-style-type: none"> Press the SUBTOTAL and BOUQUET keys. 	<div style="text-align: center;">  </div> <div style="text-align: center;">  </div>
<p>2 Add the handling charge.</p> <ul style="list-style-type: none"> Press the PRESET CHARGE (AMOUNT) Key. 	<p style="text-align: center;">Example: Charge = \$0.50</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div>

CHAPTER 4

ON-DEMAND OPERATION

Contents



4.1	Mark Down Functions	22
4.1.1	Amount Discount	22
4.1.2	Percent Discount	22
4.1.3	Special Price	22
4.2	Voiding the Last Transaction	23
4.3	Changing from Weighed Item to Fixed-price Item	23
4.4	Fixed Weight Override	23
4.5	Date Override	23
4.6	Save	24
4.7	Logo Print	24
4.8	Store Name Print	24
4.9	Care (Extra) Text Print	25
4.10	Care (Coupon) Text Print	25
4.11	POP Text Print	25

4.1 Mark Down Functions



The following three mark down options are available. Only one of these three options may be used at one time. This function must be used when the PLU is displayed on the screen.

Note: The discounted amount or entered special price must be less than displayed total price.


4.1.1 Amount Discount

<p>1 Enter the discount amount.</p> <ul style="list-style-type: none">▪ Entering discount amount<ul style="list-style-type: none">• Enter the amount to be discounted and press the AMOUNT DISCOUNT key.▪ Pressing AMOUNT DISCOUNT (preset) key<ul style="list-style-type: none">• Press the preset key in which the discount amount is set.	<p>Example: Discount amount = \$0.50</p> <p></p> <hr/> <p></p>
--	---

4.1.2 Percent Discount


<p>1 Enter the discount percentage.</p> <ul style="list-style-type: none">▪ Entering discount percentage<ul style="list-style-type: none">• Enter the percentage (1~99) to be discounted and press the PERCENTAGE DISCOUNT key.▪ Pressing PERCENT DISCOUNT (preset) key<ul style="list-style-type: none">• Press the preset key in which the percent discount data is set.	<p>Example: Discount percentage = 10%</p> <p></p> <hr/> <p></p>
--	--

4.1.3 Special Price

<p>1 Enter the special price.</p> <ul style="list-style-type: none">• Enter the special price and press the DISCOUNT key.	<p>Example: Special price = \$4.50</p> <p></p>
--	---



4.2 Voiding the Last Transaction

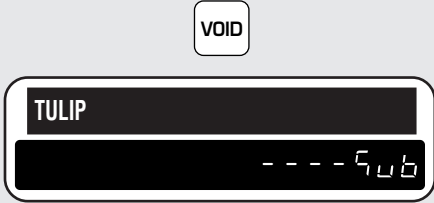This function cancels the transaction of the previously printed label/receipt.
This function must be used before calling up the next PLU.

<p>1 Void the transaction.</p> <ul style="list-style-type: none"> • Press the VOID key. • The previous label/receipt issue transaction will be canceled. • The voiding display will be displayed for a few seconds. 	
---	--

 
4.3 Changing from Weighed Item to Fixed-price Item

This function is used to change the mode from the weighed item to the fixed-price item.
This function must be used when the PLU is displayed on the screen.

<p>1 Enter the fixed price.</p> <p><i>Note: Skip this step if the fixed price is the same as the preset unit price.</i></p>	<p>Example: Fixed price = \$8.00</p> 
<p>2 Press the FIXED PRICE key.</p>	

4.4 Fixed Weight Override


This function is used to temporarily change a fixed weight of the fixed price item.
This function must be used when the PLU is displayed on the screen.

<p>1 Change the fixed weight.</p> <ul style="list-style-type: none"> • Enter the new weight and press the FIXED WEIGHT key. 	<p>Example: Current weight = 50 oz. New weight = 63 oz.</p> 
---	--

4.5 Date Override


This function is used to temporarily change the current date.
This function must be used when the PLU is displayed on the screen.

Note: This function is not available when printing in the receipt mode.

<p>1 Enter the date.</p> <ul style="list-style-type: none"> • Enter the date (MMDDYY) and press the DATE key. <p>Note: The scale may be configured at installation to override the expire date instead of the current date.</p> <p>M : Month D : Day Y : Year</p>	<p>Example: November 20, 1997</p> 
--	---

4.6 Save


The SAVE key is one of the additional function options. During a transaction, the SAVE key can be used to maintain accessed PLU data that will be used repeatedly. This data is reset when the SAVE key is pressed again.

1 Select the PLU. <ul style="list-style-type: none">Select the desired PLU if not already displayed.	Select PLU
2 Save the PLU. <ul style="list-style-type: none">Press the SAVE key. Then the SAVE indicator will light. <p>Note: To cancel the save mode, press the SAVE key again.</p>	

4.7 Logo Print

With this function, a preset logo can be selected and printed on the labels. This operation should be performed after the PLU has been accessed and before the label is issued. This function must be used when the PLU is displayed on the screen.

Note: This function is not available when printing in the receipt mode.

1 Select the desired logo. <ul style="list-style-type: none">Enter the logo number and press the LOGO key. <p>Note 1. When logo printing is not needed, press the "0" key followed by the LOGO key.</p> <p>2. Label format must be configured to allow logo printing.</p>	
--	---


Example: Logo no. 2

4.8 Store Name Print

With this function, a preset store name can be selected and printed on the labels. This operation should be performed after the PLU has been accessed and before the label is issued.

This function can be used at any time.

 
Note: This function is not available when printing in the receipt mode.

1 Select the desired store name. <ul style="list-style-type: none">Enter the store name number and press the STORE NAME key. <p>Example: Store name no. 2</p>	
---	---

4.9 Care (Extra) Text Print

With this function, a preset care (extra) text can be selected and printed on the first label. This operation should be performed after the PLU has been accessed and before the label is issued. This function must be used when the PLU is displayed on the screen.


Note: This function is not available when printing in the receipt mode.

<p>1 Select the desired care (extra) text.</p> <ul style="list-style-type: none">Enter the care (extra) text number and press the 1ST CARE TEXT key. <p>Note: When extra text printing is not needed, press the "0" key followed by the 1ST CARE TEXT key.</p> <p>Example: Care (extra) text no. 10</p>	
--	---

4.10 Care (Coupon) Text Print

With this function, a preset care (coupon) text can be selected and printed on the second label. This operation should be performed after the PLU has been accessed and before the label is issued. This function must be used when the PLU is displayed on the screen.


Note: This function is not available when printing in the receipt mode.

<p>1 Select the desired care (coupon) text.</p> <ul style="list-style-type: none">Enter the coupon text number and press the 2ND CARE TEXT key. <p>Note: When coupon text printing is not needed, press the "0" key followed by the 2ND CARE TEXT key.</p> <p>Example: Care (coupon) text no. 30</p>	
---	---

4.11 POP Text Print

With this function, a preset POP text can be selected and printed on the labels. This operation should be performed after the PLU has been accessed and before the label is issued. This function must be used when the PLU is displayed on the screen.

Note: This function is not available when printing in the receipt mode.

<p>1 Select the desired POP text.</p> <ul style="list-style-type: none">Enter the POP text number and press the POP TEXT key. <p>Note: When POP text printing is not needed, press the "0" key followed by the POP TEXT key.</p> <p>Example: POP text no. 6</p>	
--	---

CHAPTER 5

SUBTRACTION



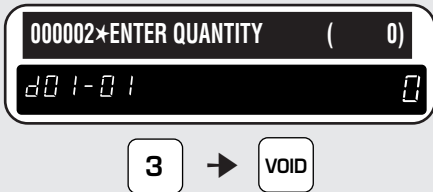
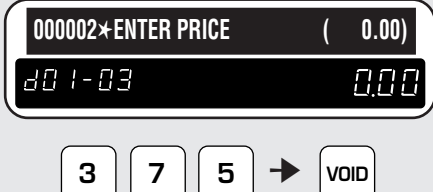

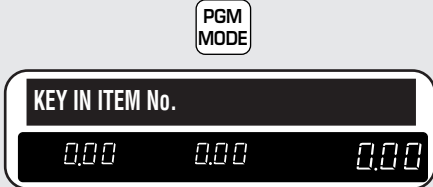
Contents

5.1	Subtraction	28
-----	-------------------	----

5.1 Subtraction

The subtraction is used to subtract the transacted total from the running totals. The operator has to enter the PLU number, quantity, and price. The recommended way to manage subtraction is to keep all incorrectly produced labels in one place and subtract each label in turn.

Note: Confirm that the Operation Key Sheet, and not the Program Key Sheet, is being used for this operation.
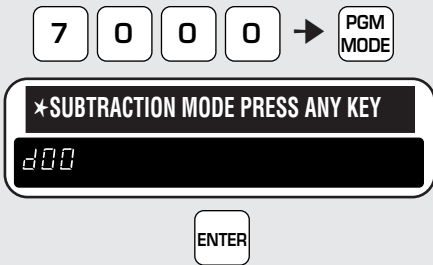
<p>1 Enter the subtraction mode.</p> <ul style="list-style-type: none"> Enter the password followed by the PROGRAM MODE key to enter the subtraction mode. <p>Example: Password = 7 0 0 0</p> <p>Note: To exit the subtraction mode, press the PROGRAM MODE key again.</p> <ul style="list-style-type: none"> Press the ENTER key. 	
<p>2 Enter the PLU.</p> <ul style="list-style-type: none"> Enter the PLU number followed by the PLU key. <p>Example: PLU no. 2</p>	
<p>3 Enter the quantity.</p> <ul style="list-style-type: none"> Enter the quantity of the item (label) to be subtracted, and press the VOID key. <p>Example: Three (3) pcs.</p>	
<p>4 Enter the price.</p> <ul style="list-style-type: none"> Enter the price of the item (label) to be subtracted, and press the VOID key. <p>Example: \$3.75</p> <p>Note: If a mistaken entry was made, use the VOID key to return to the screen with the mistake. Then enter the correct data.</p>	
<p>5 Print</p> <ul style="list-style-type: none"> Press the PRINT key. 	
<p>6 Repeat the transaction.</p> <ul style="list-style-type: none"> Repeat steps 2 through 5 for any other items (labels) to be subtracted. 	
<p>7 Return to the initial display.</p> <ul style="list-style-type: none"> Press the PROGRAM MODE key to return to the initial display. 	

CHAPTER 6


TROUBLESHOOTING

Contents

6.1	Error Messages	30
6.2	How to Release Error Conditions ...	31
6.3	How to Replace Fuse	31
6.4	Other Problems	31

6.1 Error Messages

When errors occur, use the error table below to ascertain the cause of the error and to recover normal operations.

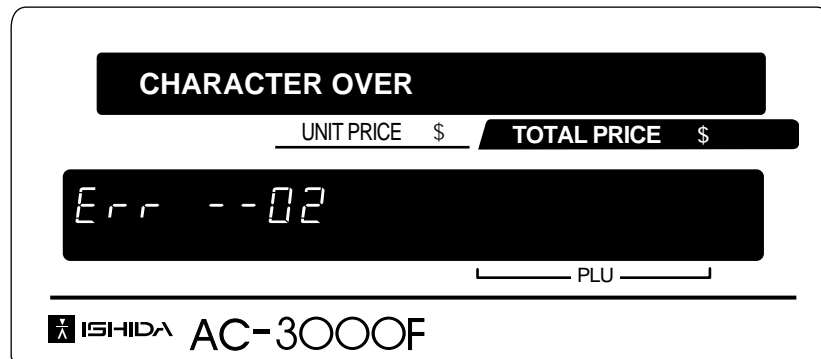

Error No.	Error Message	Error Contents
01	IMPROPER POSITION. CHECK CASSETTE	The cassette is not in the correct position. (AC-3000 only)
02	CHARACTER OVER	PLU name has too many characters per line.
03	POP MESSAGE: OVER CHARACTER	Insufficient space for POP message.
04	AD MESSAGE: OVER CHARACTER	Extra text has too many characters per line.
06	REG. CODE: OVER CHARACTER	Insufficient space for register code.
07	STORE NAME/ADDR.: OVER CHARACTER	Store name and address have too many characters per line.
08	LABEL END	All labels have been used.
09	LABEL SIZE ERROR	Improper label size is used.
10	PRICE DISCOUNT IS TOO LARGE	The discounted price is incorrect.
11	TABLE STRUCTURE CORRUPTION	Table structure has become corrupted.
12	MAX ITEM NUMBER OVERFLOW	Maximum number of items exceeded. (receipt application only)
13	SAME OPR. TOTALING ON MAC.	An operator performed sub-total operation at a different scale.
14	SAME OPR. PROCESSING ON OTHER	The same operator code is used at a different scale.
40	MEMORY NOT INITIAL SET	Memory has not been initialized.
42	SYSTEM ERROR	A fundamental system error has occurred.
43	E2ROM NOT INITIAL SET	E2 ROM has not been initialized.
50	NO POWER SCALE	The internal cables are not properly connected.
56	REMOVE THE ITEM ON THE PLATTER	An item is on the platter when the power is turned ON.
57	REMOVE THE ITEM ON THE PLATTER	An item is on the platter when the power is turned ON.
9380	COMM. ERROR ON RESULT TRANSFER	Communication error when sending transaction data.
9330	MASTER CONNECTION ERROR	The master scale is not properly connected.
9300	SYSTEM ERROR (CHECK CABLE)	System error involving the cable has occurred.
9330	SYSTEM ERROR (CHECK MASTER SCALE)	System error involving the master terminal has occurred.
9316	MASTER IS OFF-LINE	The master scale is not on-line.
66	MEMORY AREA OVERFLOWED	Too much data is in the memory area.
9309	ERROR ON COMM. CROSSOVER	The same transaction data is received by the master scale.


6.2 How to Release Error Conditions

- If an error occurs for any reason, use the **CLEAR** key to release the error condition.
- If trouble occurs during operations and you are unable to return to normal operation, use the **RESET** key to re-initialize the scale. (This operation produces the same effect as turning the power off and then restarting.)

6.3 How to Replace Fuse

If the display does not light when the power is on, this may indicate a problem with the fuse. Use the procedure below to check and replace the fuse.

- (1) Turn off the power, and unplug the power cord from AC outlet.
- (2) Use a Philips head screw driver to remove the fuse holder cover located by ON/OFF switch.
- (3) Check whether or not the fuse has blown.
- (4) If the fuse has blown, replace with the same type of fuse.

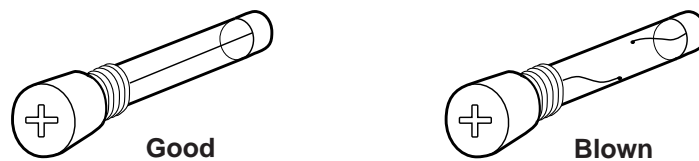

- (5) Return and secure the fuse holder cover.
- (6) Plug the power cord into AC outlet, and turn on the scale.

6.4 Other Problems

- **Poor printing quality.**
The thermal head has become soiled. Use the supplied cleaner set to clean the printer head.
- **Labels are not printed as soon as an item is placed on the weigh platter.**
The scale is set in the MANUAL mode. (AUTO indicator is not lit.)
Press the PREPACK key to turn on the AUTO indicator.
- **Labels are not issued.**
The printing position may not be properly set. Press the PAPER FEED key to align the paper to the correct printing position.



44 SANNO-CHO, SHOGOIN, SAKYO-KU
KYOTO, 606 JAPAN
PHONE: (075) 771-4141
FACSIMILE: (075) 751-1634
TELEX: 05422065 SCALES J