 


RLT Series

Indicators

Operation Manual

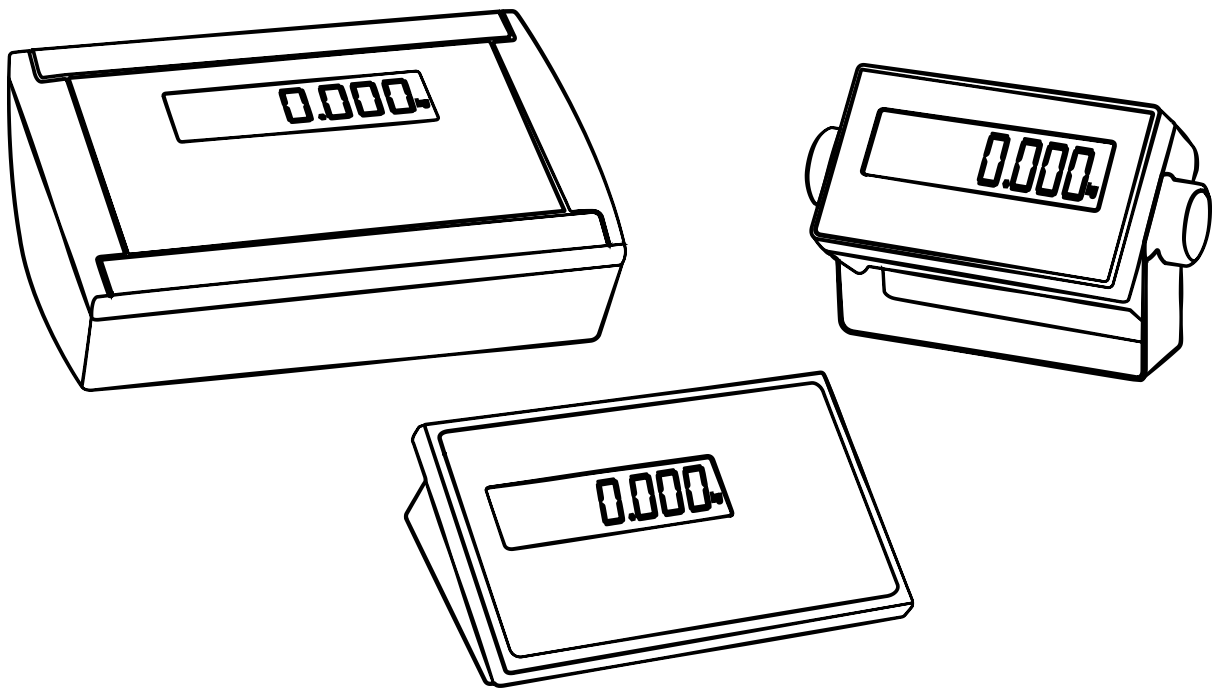

An ISO 9001 registered company
© Rice Lake Weighing Systems. All rights reserved.

Rice Lake Weighing Systems® is a registered trademark of
Rice Lake Weighing Systems.
All other brand or product names within this publication are trademarks or
registered trademarks of their respective companies.

All information contained within this publication is, to the best of our knowledge, complete and accurate at the time of publication. Rice Lake Weighing Systems reserves the right to make changes to the technology, features, specifications and design of the equipment without notice.

The most current version of this publication, software, firmware and all other product updates can be found on our website:

www.ricelake.com

INTRODUCTION	5
WARNINGS	5
MAIN FEATURES	6
POWER SUPPLY VIA MAINS	6
POWER SUPPLY VIA BATTERY	6
AUTOMATIC RESET WHEN SCALE IS SWITCHED ON	6
SAVING BATTERY POWER	7
AUTOMATIC SWITCHING OFF	7
AVAILABLE TARE FUNCTIONS	7
THE DISPLAY	8
IDENTIFICATION OF THE METROLOGICAL SOFTWARE	9
BASIC FUNCTIONS	10
ON	10
OFF	10
ZERO	10
AUTOMATIC TARE	11
TARE DELETION	11
PRESETTABLE TARE (PT)	12
PRINTOUT (AND REPRINT OF THE LAST TICKET)	13
METRICS	13
REGULATION OF THE DISPLAY BRIGHTNESS	14
ADDITIONAL FUNCTIONS	15
SETTINGS A TARE VALUE ALREADY KNOWN (PT)	15
30 TARES ARCHIVE	15
AUTOMATIC TARE DELETION	16
NUMERICAL IDS	17
DATE AND TIME	18

ADVANCED FUNCTIONS	19
HOW TO ACCESS THE FUNCTION MENU AND SELECT THE DESIRED ONE	19
WEIGHING WITH HIGH RESOLUTION DISPLAY - <i>h.i.r.E5</i>	20
HORIZONTAL ACCUMULATOR - <i>tothL</i>	22
MIXING SEVERAL COMPONENTS - <i>FormUL</i>	24
COUNTING - <i>Count</i>	26
WEIGHT CHECK - <i>ChECH</i>	29
UNIT OF MEASUREMENT CONVERSION - <i>ConuEr</i>	32
PERCENTAGE WEIGHING - <i>PERC</i>	33
HOLDING WEIGHT ON THE DISPLAY - <i>hold</i>	36
EXCHANGE BETWEEN NET WEIGHT AND GROSS WEIGHT - <i>netGross</i>	37
CONFIGURATION MENU	38
<i>LoCH</i> - DATE AND TIME	38
<i>PrEC. ID</i> - HIGH RESOLUTION READING DIVISION	38
<i>ALibi</i> - ALIBI MEMORY READING	39
<i>SEtPnt</i> - RELAY PORTS	39
<i>Filter</i> - WEIGHING FILTERS	40
<i>SErEEr</i> - ADJUSTING THE DISPLAY	41
<i>TARE</i> - TARE	42
<i>AutoFF</i> - AUTOMATIC SWITCHING OFF	42
<i>on.Pr in</i> - MANUAL PRINTER SWITCHING ON	42
<i>ti.h.r.E5</i> - TICKET NUMBER RESET	43
<i>rESEt</i> - FACTORY CONFIGURATION RESET	43
<i>diAG</i> - DIAGNOSTICS	43
FAQ	44
PRINT	44
ACCUMULATION	44
TARE	44
WEIGHING	45
PIECE COUNTER	45
ERROR MESSAGES	46

INTRODUCTION

The purpose of this manual is to familiarise the user with the different weight indicator operating modes, key functions and display instructions.

We recommend carefully following the instructions when programming the weight indicator, as to do otherwise could jeopardise proper scale operation.

In addition to having all the conventional features of a high precision scale, the indicator offers extra user features such as the function of converting the unit of measurement into pounds, converting net weight/gross weight, gross weight or net weight setpoint, in-out truck weighing, single scale universal repeater, multi-scale repeater, approved weight transmission to PC with alibi memory, +/- checkweighing, sample weight percentage, weight hold on display, peak sensor, weighing accumulator, piece counting. These features make it suitable both for industrial use as well as for legal use with third parties and in trade, meeting the most up to date needs as far as transmission and data printing via the two bidirectional serial ports.

This manual was written with the utmost care but we always welcome feedback on any inaccuracies you may find.

WARNINGS

The instrument is covered by warranty and **MUST NOT BE OPENED BY THE USER** for any reason. Any attempt to repair or modify the unit could expose the user to the risk of electrical shock and will render all warranty conditions null.

All problems with the unit or the system must be communicated to the manufacturer or the dealer from which it was purchased. In any case, **DISCONNECT POWER** before any operations.

The instrument is insulated between the dangerous voltage area and the parts that are accessible to the user.

- Do not pour liquids onto the indicator (except for models with IP65 protection or higher).
- Do not use solvents to clean the indicator.
- Do not expose the instrument to direct sunlight or sources of heat.
- Set or secure the indicator and the platform on a base with no vibrations.
- All the indicator connections must be made respecting the applicable standards in the installation area and environment.

Whatever is not explicitly described in this manual is to be considered improper use of the equipment.

Do not install in atmospheres with the risk of explosion.



The crossed out wheeled bin symbol on the product shows that it must be brought to appropriate separate waste collection centres at the end of its life cycle or returned to the dealer when purchasing a new equivalent product. Proper separate collection to then send the product to recycling contributes to preventing possible negative effects on the environment and to health and promotes recycling. Users who dispose of the product illegally shall face administrative sanctions as provided for by law.

MAIN FEATURES


POWER SUPPLY VIA MAINS

Every RLT range indicator is equipped with a specific power cable or charger, depending on the model. The only exceptions are the specific models for explosive atmospheres, in which case refer to the specific manual. The safety standards in force must be respected when connecting the unit to the 110/240V mains, including the use of a “clean” line with no disturbances or interferences caused by other electronic equipment. The power-on LED (if available) on the front panel comes on if the instrument is powered correctly. If there is an internal rechargeable battery, it is charged automatically.

POWER SUPPLY VIA BATTERY

Internal battery charge level indicator

 Charged battery

 Low battery

The **Lo!! bAtt** message precedes automatic instrument switching off.

Battery charging indicator



AUTOMATIC RESET WHEN SCALE IS SWITCHED ON

If a weight less than 10% of the capacity is on the scale when it is switched on, the weight is automatically reset. This function is useful in automatically resetting a container, pallet or small structure without having to recalibrate the scale.



Weights over 10% can be reset by changing the original calibration. Automatic reset when the scale is switched on can be deactivated.

 *Automatic reset when the scale is switched on requires advanced configuration.*

KEYBOARD LOCK

The indicator keyboard can be deactivated in order to avoid accidentally carrying out the available functions.

 *Keyboard lock requires advanced configuration.*

SAVING BATTERY POWER

The instrument is equipped with advanced battery power saving functions designed to increase operating time.

 *Saving battery power requires advanced configuration.*

AUTOMATIC SWITCHING OFF

This function activates when the scale is completely unloaded and has not been used for a set amount of time (*standard 5 minutes*). To activate or deactivate automatic switching off, go into the autooff section in the configuration menu.

WARNING

In accumulation and formulation mode, automatic switching off causes the accumulation in progress to be lost.

 
AVAILABLE TARE FUNCTIONS

The instrument allows you to choose from specific tare functions for your needs:

- **Locked** tare (standard factory configuration).
- **Unlocked** tare: automatically deleted every time the scale is unloaded. Useful in preventing errors when the tare is different for every weighing.
- Tare acquired automatically by the scale. Tare is only acquired if there is no other saved tare value.
- Tare function disabled.

To customise the tare function, go into the *tARE* section in the configuration menu.

THE DISPLAY

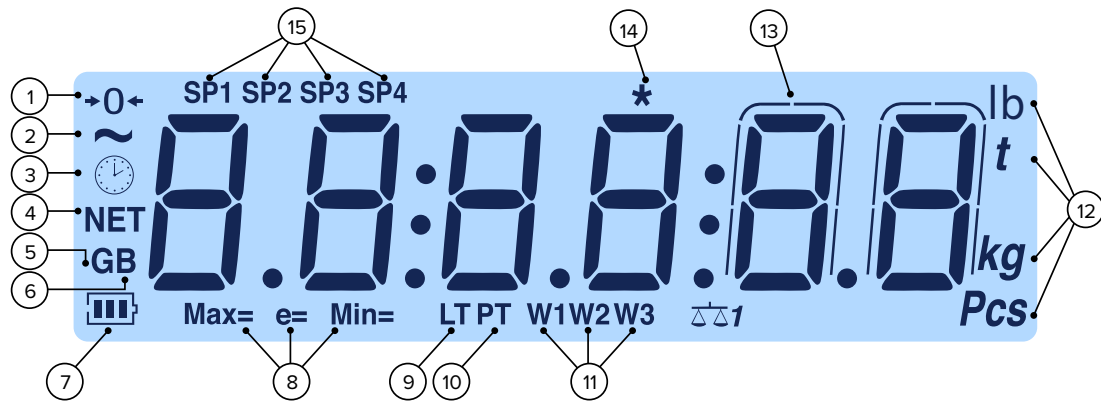

Number	Symbol	Description
(1)	→0←	The scale is unloaded and at zero (gross).
(2)	~	The weight is unstable.
(3)		The time is being shown on the display.
(4)	NET	The weight displayed is net. There is a saved tare.
(5,6)	G B	The weight displayed is gross.
(7)		Battery level.
(8)	Max= Min= e=	Metrics are being displayed.
(9)	LT	A locked tare is active.
(10)	PT	A manual tare is active.
(11)	W1 W2 W3	Indicate the range of active weighing.
(12)	lb ... Pcs	Units of measurement - Pounds (lb), tonnes (t), kilograms (kg), grams (g), number of pieces (Pcs).
(13)		The weight is being displayed in high resolution.
(14)	*	Indicates a key is pressed. In some operating modes, it indicates that a specific function is active.
(15)	SP1... SP4	Indicate the active relay ports (only with the optional board).

LETTERS:


A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z

NUMBERS:


0	1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8	9

IDENTIFICATION OF THE METROLOGICAL SOFTWARE

 1. Turn off the scale

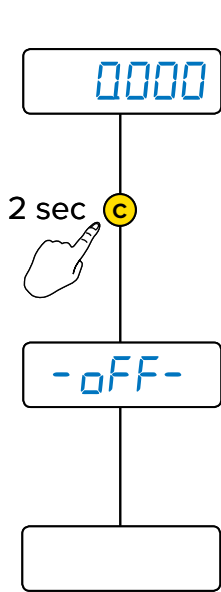


 2. Follow the procedure:

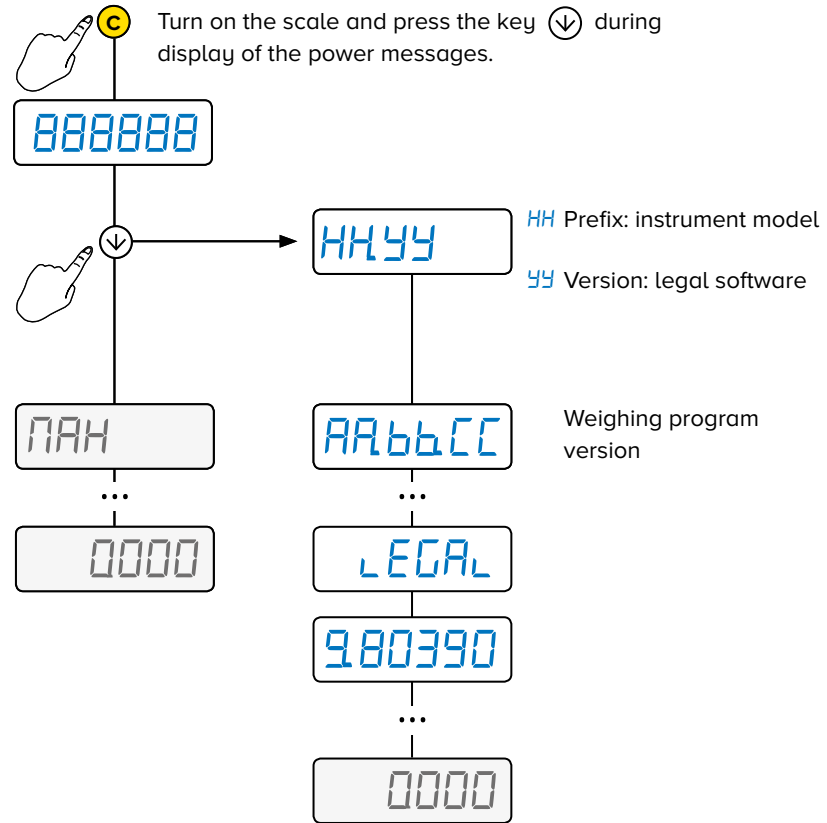


BASIC FUNCTIONS

 
ON

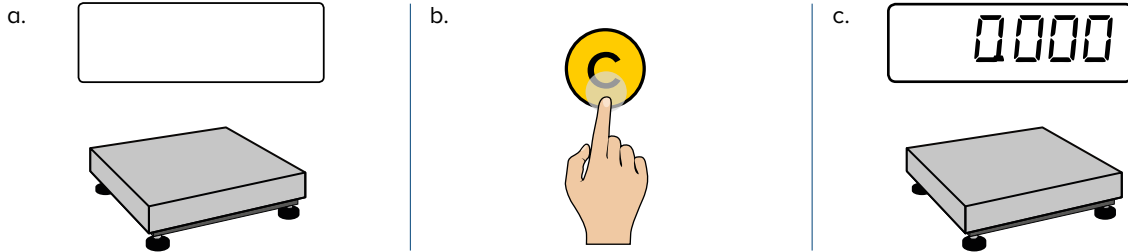






OFF

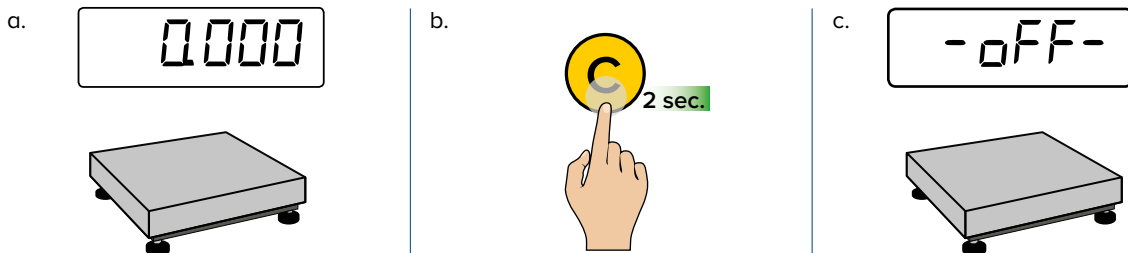 




ZERO

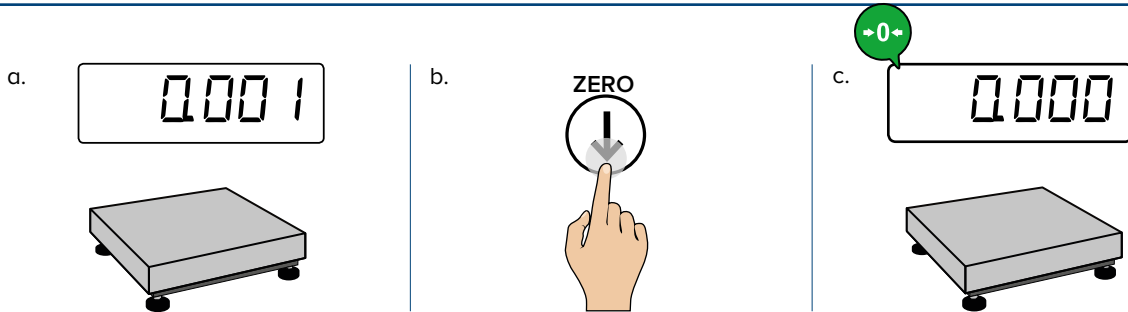 









AUTOMATIC TARE

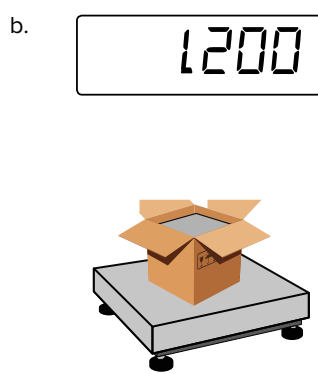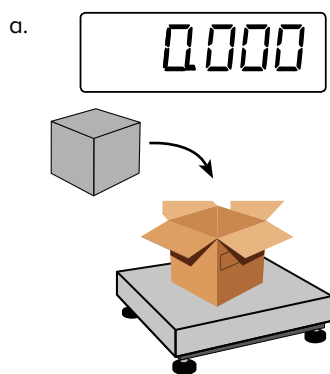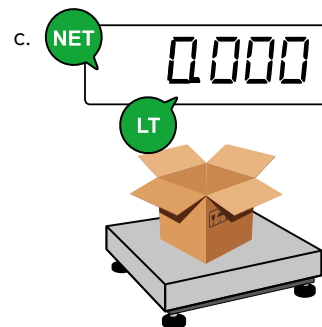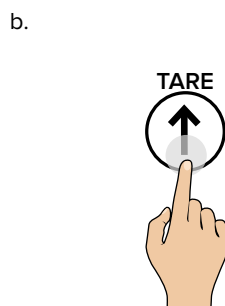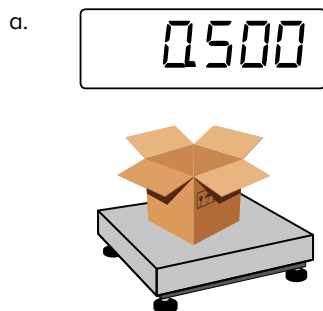     

TARE DELETION

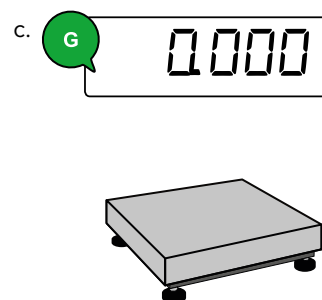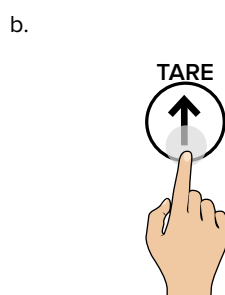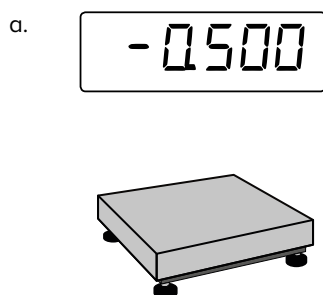   


PRESETTABLE TARE (PT)

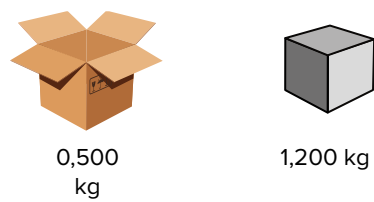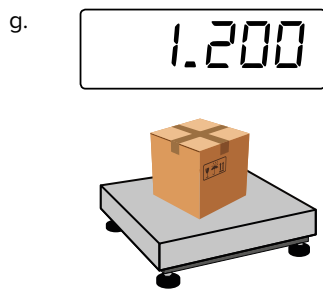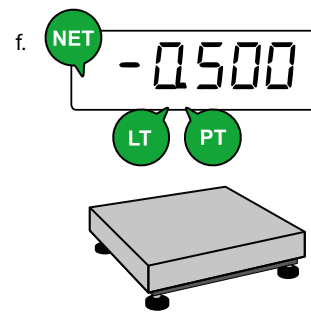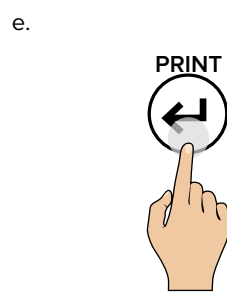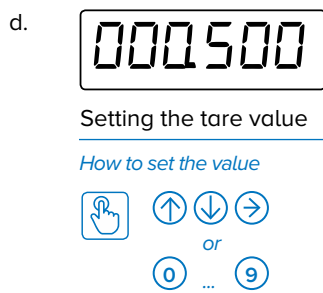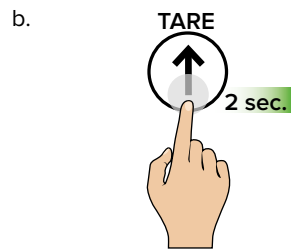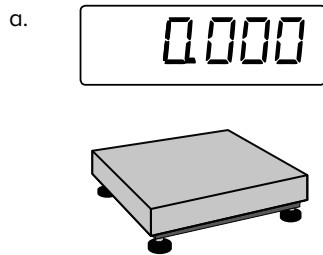        

i

If the indicator has a number keypad, it is possible to enter the tare quickly:

 
a. Enter the tare value

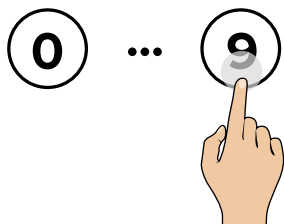


b.




 
PRINTOUT (AND REPRINT OF THE LAST TICKET)

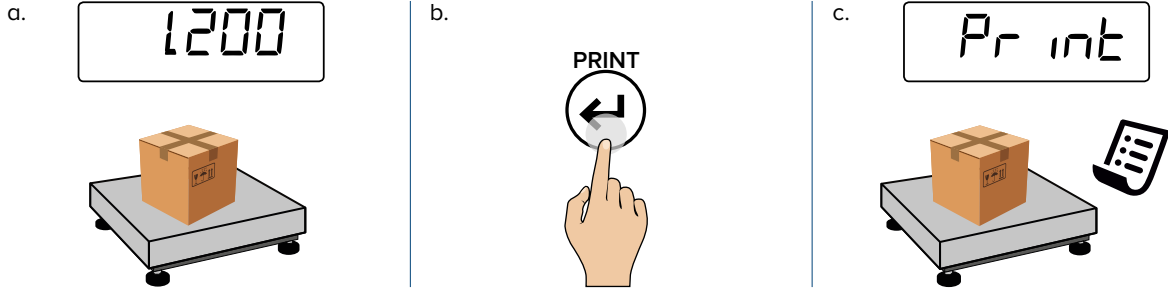



 
To reprint the last ticket (for models with numerical keyboard)

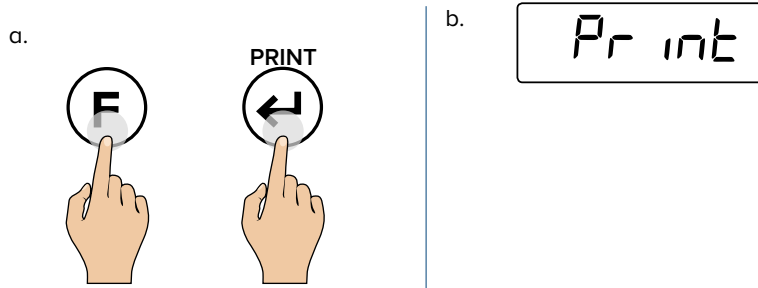

METRICS

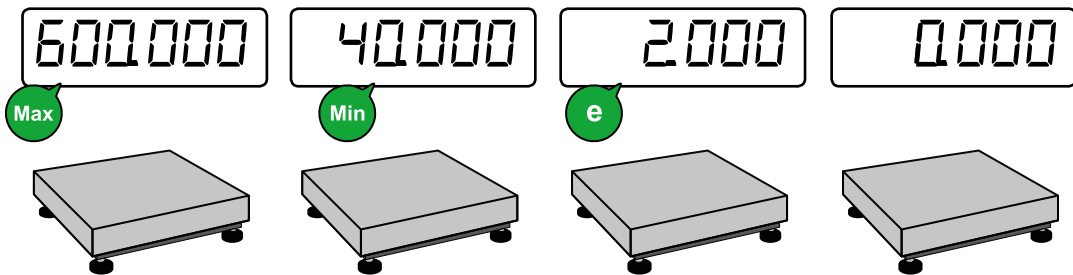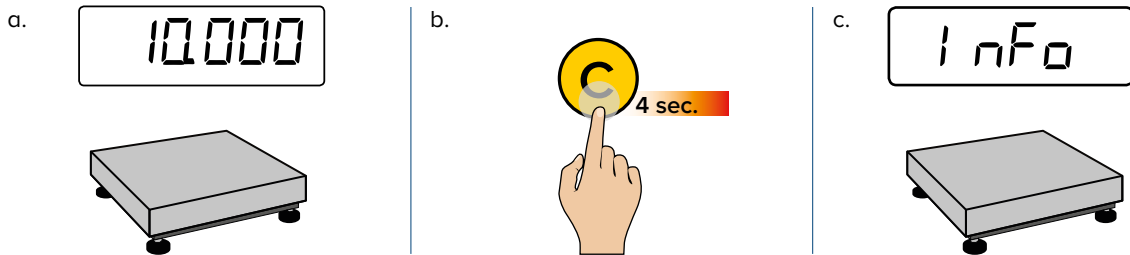  

REGULATION OF THE DISPLAY BRIGHTNESS

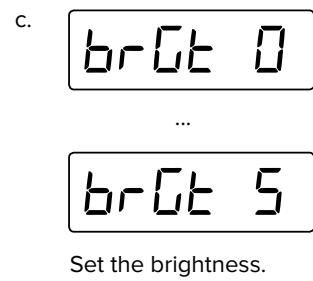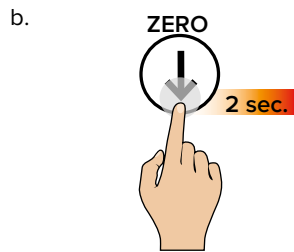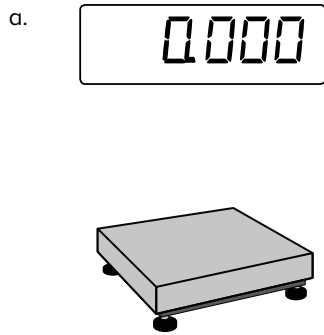   


How to set the value



ADDITIONAL FUNCTIONS

SETTINGS A TARE VALUE ALREADY KNOWN (PT)

 a. Enter the tare value

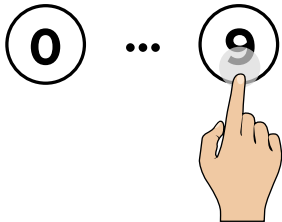

b.



30 TARES ARCHIVE

This memorises the most commonly used tares (up to 30), to simplify retrieval with quick selection.

Example



10,0 kg



 
12,0 kg




15,0 kg

How to store a tare

a.

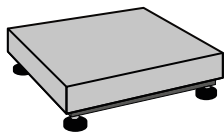

b.

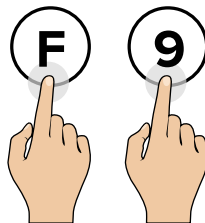 

c.



Select the memory.

How to set the value

 


d.

PRINT



e.



Enter the tare value

How to set the value

 


f.

PRINT




g.

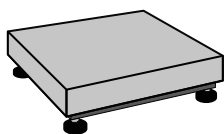


How to retrieve a stored tare

 a.

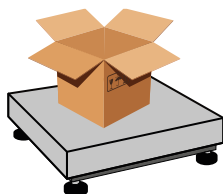

b.

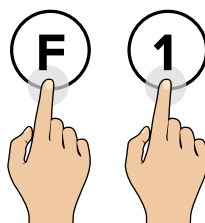 

c.

Select the memory.

How to set the value

 


d.


e.

AUTOMATIC TARE DELETION

a.

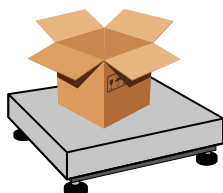

b.

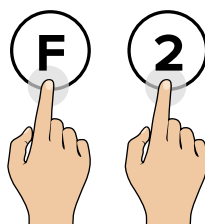 

c.

Automatic deletion disabled

 
 
Automatic deletion enabled: the tare will be deleted automatically when the pallet truck is completely unloaded.

NUMERICAL IDS



The instrument is fitted with 2 memories for the temporary registration of numerical codes that can be used to identify the product, the operator, the lot etc... These codes, if entered, will be present in the ticket when printing.

How to enter the ID


a.

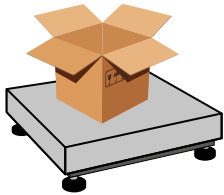

b.

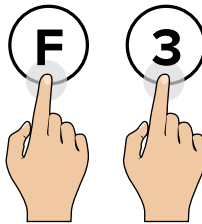  

c.

 


Select the memory.

How to set the value



 d.



e.



Enter the required ID
(up to 10 digits)

How to set the value

 


f.





How to enable automatic ID deletion


a.

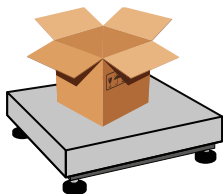

b.

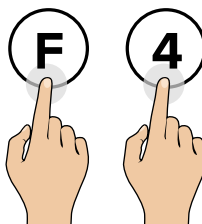  

c.

 


Select the memory.


How to set the value



 
d.



e.

 

Automatic deletion disabled.

 

Automatic deletion enabled: the entered ID will be deleted automatically when the pallet truck is completely unloaded.

 


The numerical IDs zero automatically when turning off the scale.

DATE AND TIME


a.

0.000

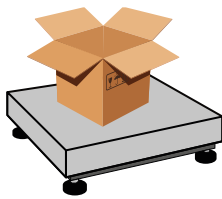

b.

 FUn 8

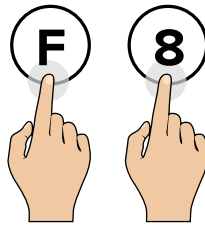

c.



day

Month

YEAR

hour

 
 
 
Minute

i


Only present if the Alibi option is installed.

ADVANCED FUNCTIONS


HOW TO ACCESS THE FUNCTION MENU AND SELECT THE DESIRED ONE

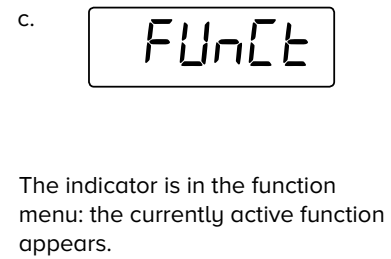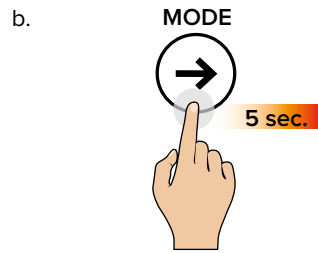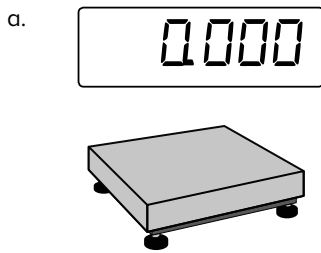

 d. Select the function

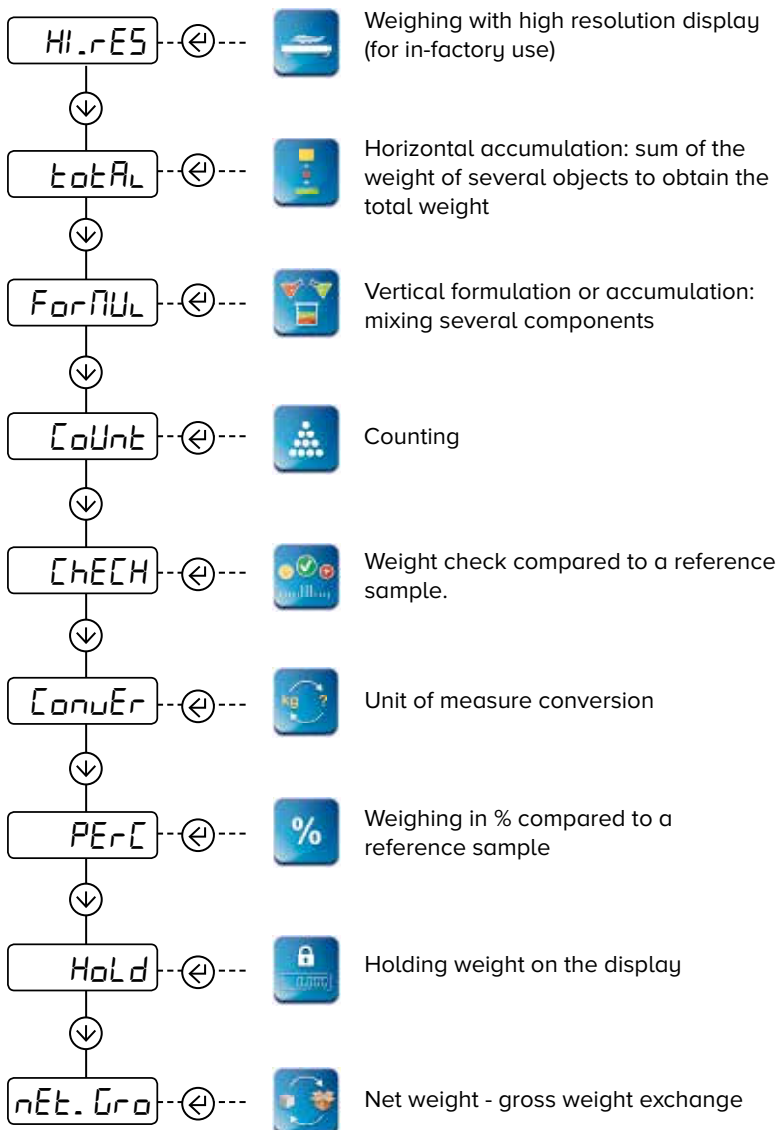


 
Once you have selected the function, the scale goes back to weighing mode.

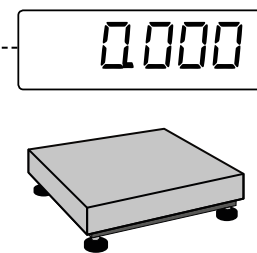



WEIGHING WITH HIGH RESOLUTION DISPLAY - h i . r E 5

  How to check calibration, if necessary

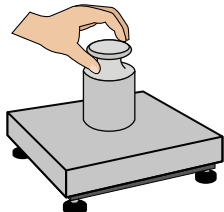


How to adjust calibration, if necessary

a.



 b.




Set the sample weight




c.



 
d.




e.

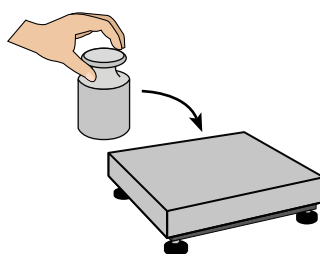 


f.

 


g.

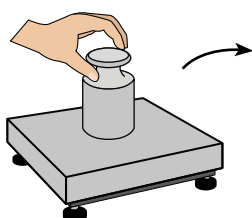 

h.

 

i.









 


Check finished calibration

WEIGHING WITH HIGH RESOLUTION DISPLAY - h i . r E5



         How to select the desired reading division

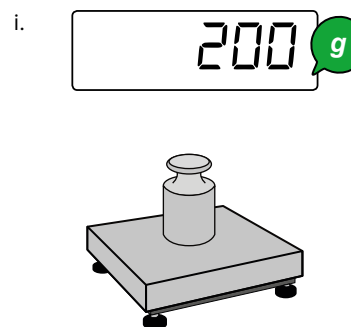
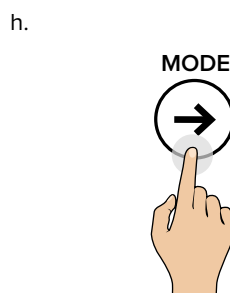
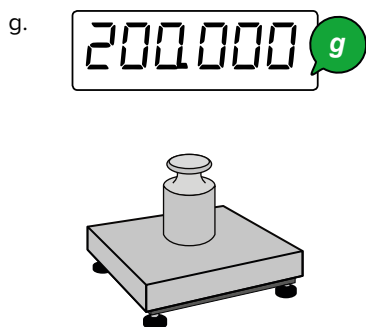
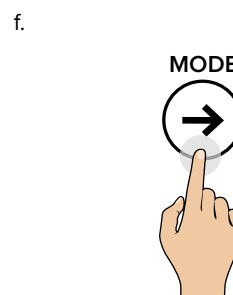
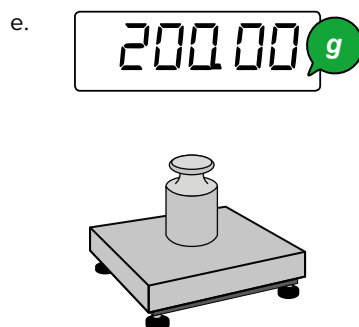
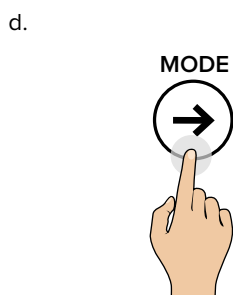
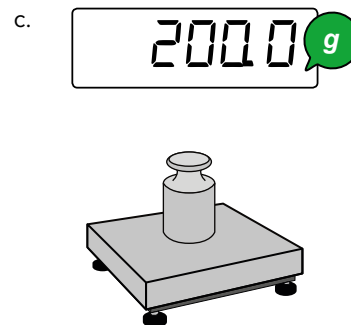
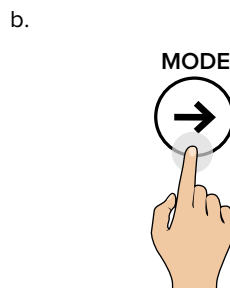
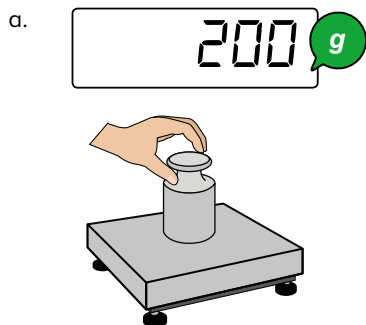


This operating mode requires configuring an appropriate filter (h i . r E50...h i . r E57), the maximum number of decimal digit is 3.



HORIZONTAL ACCUMULATOR - TOTAL

         How to sum the weighs

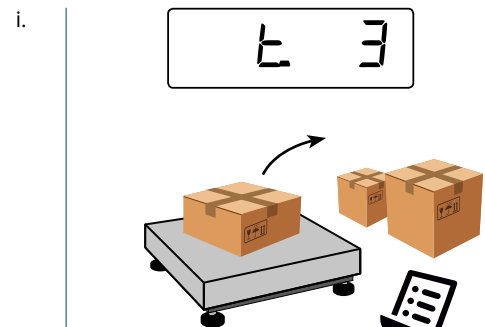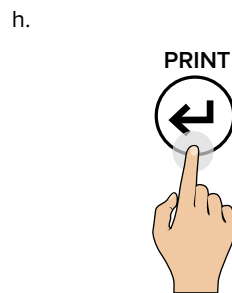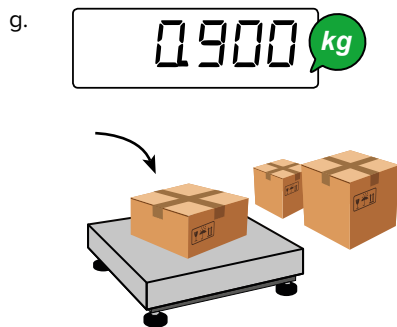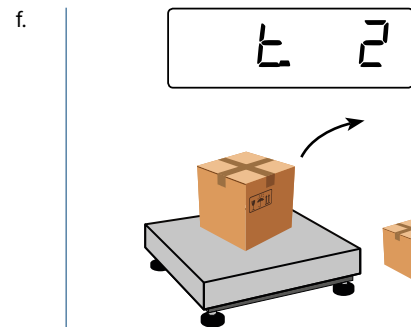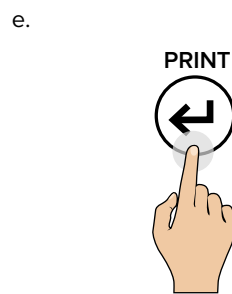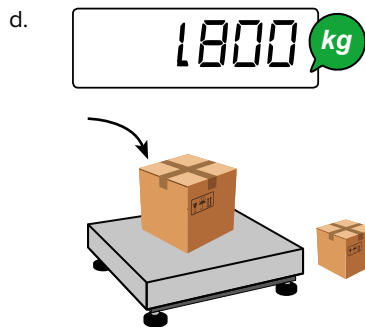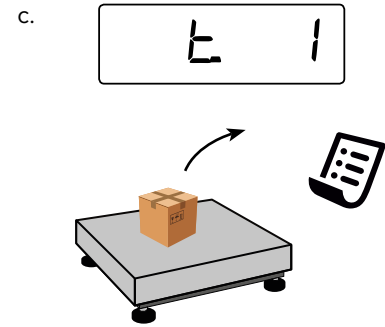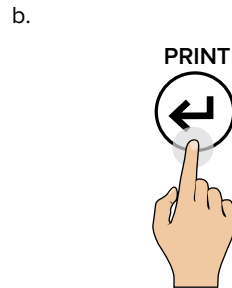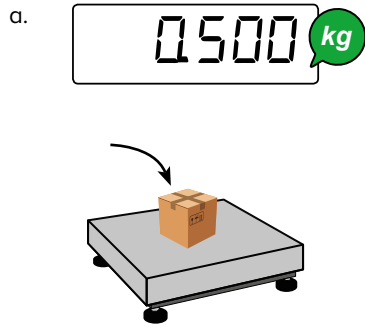

HORIZONTAL ACCUMULATOR - total

 
 


How to momentarily read the total



a.



b.

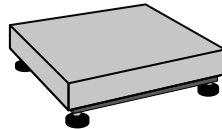

Number of weights

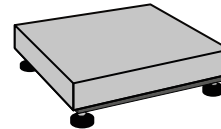  

Total weight



i

 
 
With numerical keyboard, **(F) + (7)** simply shows the current total without any printout/reset.

How to end accumulation and reset the total



a.



b.

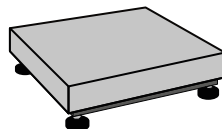

Number of weights

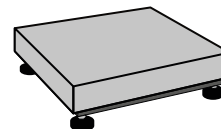  

Total weight

 


i



With numerical keyboard, **(F) + (7)** simply shows the current total without any printout/reset.

How to print and reset the grand total



a.

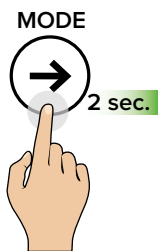

b.

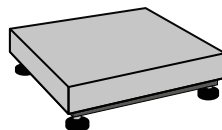  

Number of weights

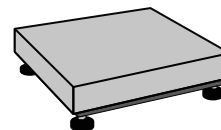  

Total weight



 
 
 
 
 
 
 
 
 
 
 
 
i

With numerical keyboard, **(F) + (6)** simply shows the current total without any printout/reset.



MIXING SEVERAL COMPONENTS - Formula

How to sum the weights

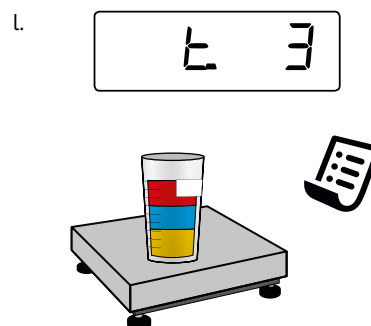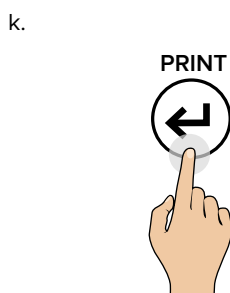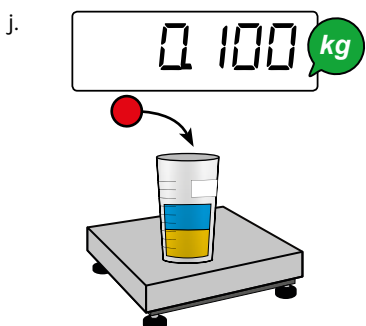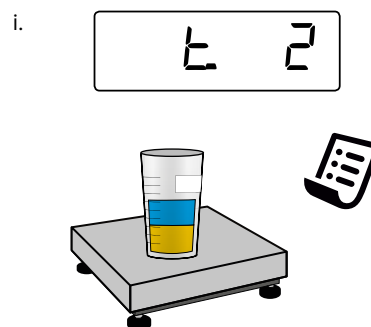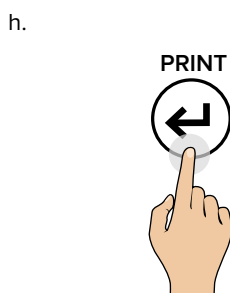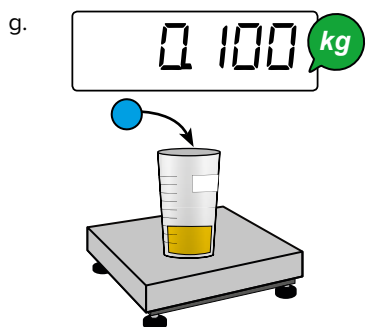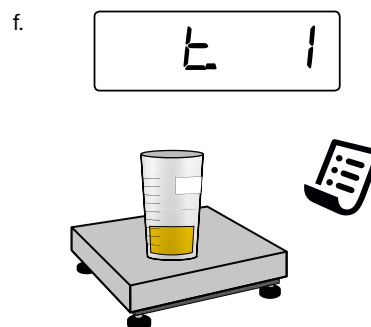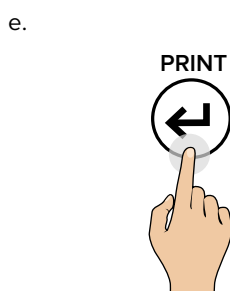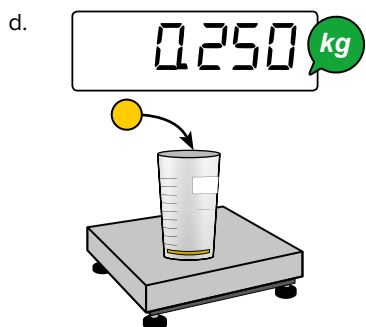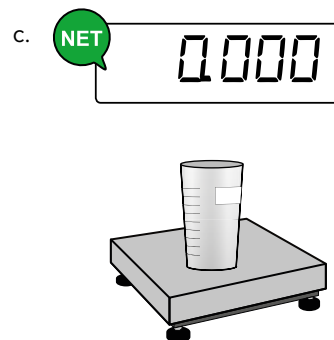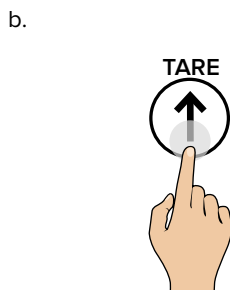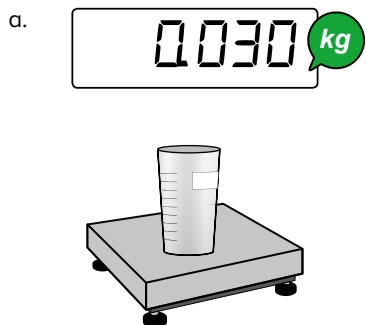

MIXING SEVERAL COMPONENTS - For ALL

 


How to momentarily read the total

a.



b.

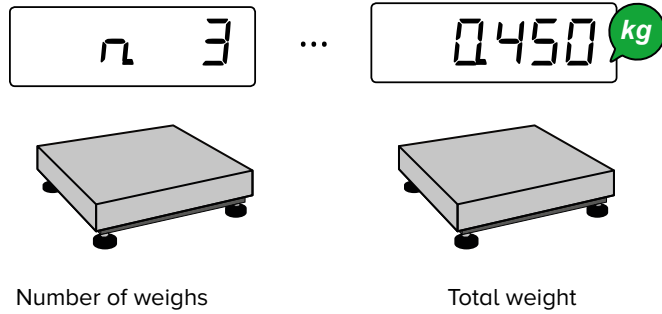

i

 
With numerical keyboard, **(F) + (7)** simply shows the current total without any printout/reset.

How to reset the total

a.



b.

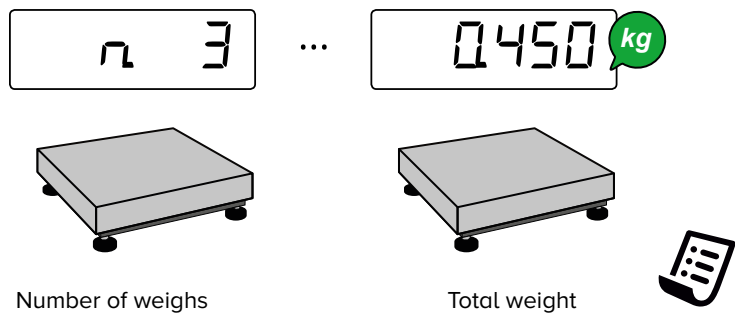


i


With numerical keyboard, **(F) + (7)** simply shows the current total without any printout/reset.

How to print and reset the grand total

 a.

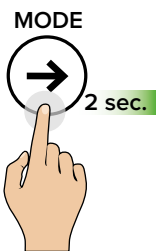

b.

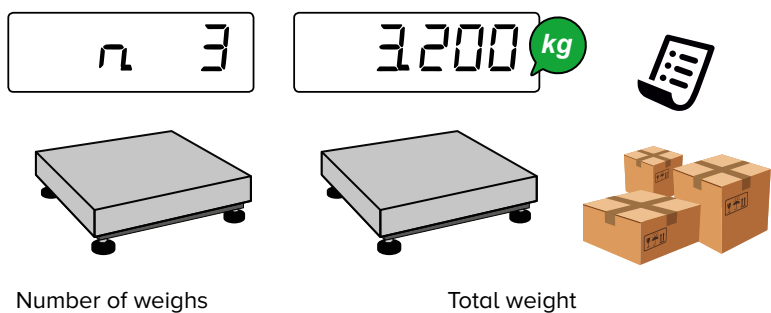 






i

With numerical keyboard, **(F) + (6)** simply shows the current total without any printout/reset.



COUNTING - Count

     
How to sample and count

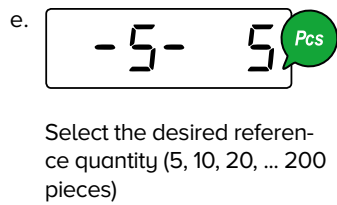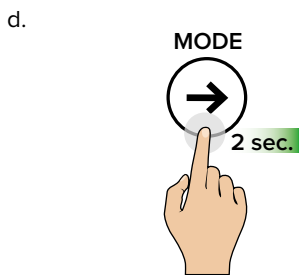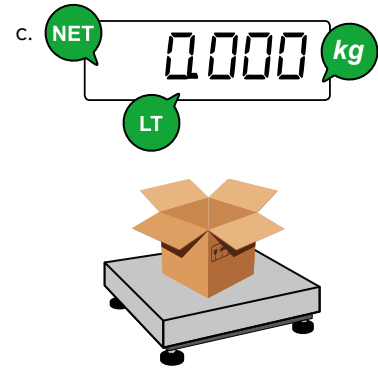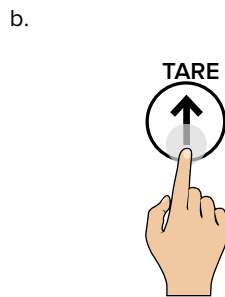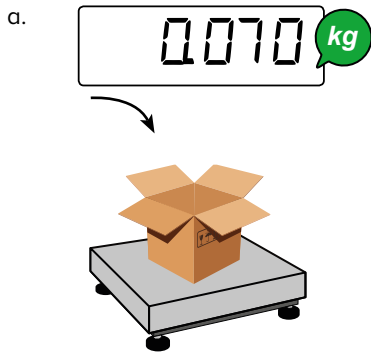

How to set the value





 With the numerical keyboard, the combination of the **F** + **5** keys allows to type the desired quantity (in any amount).

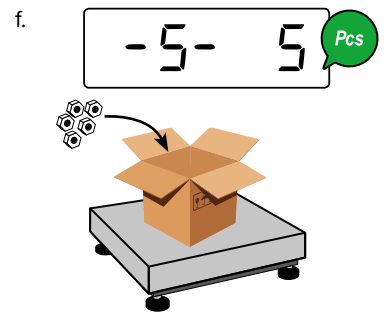


Load the selected reference quantity

  For a correct sampling, the reference quantity must have a weight of at least 0.1% of the maximum scale capacity.

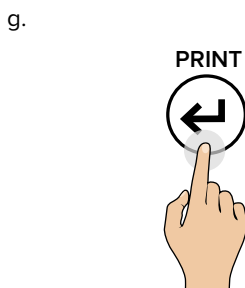

Sampling in progress, please wait...

 
* With the numerical keyboard, the combination of the **F** + **7** keys allows to modify the sampling time. The more the time, the more the sampling precision.

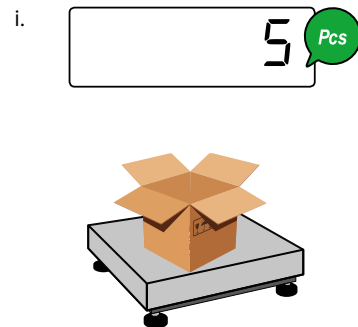







COUNTING - CoUnt



 How to switch between pieces count and weight

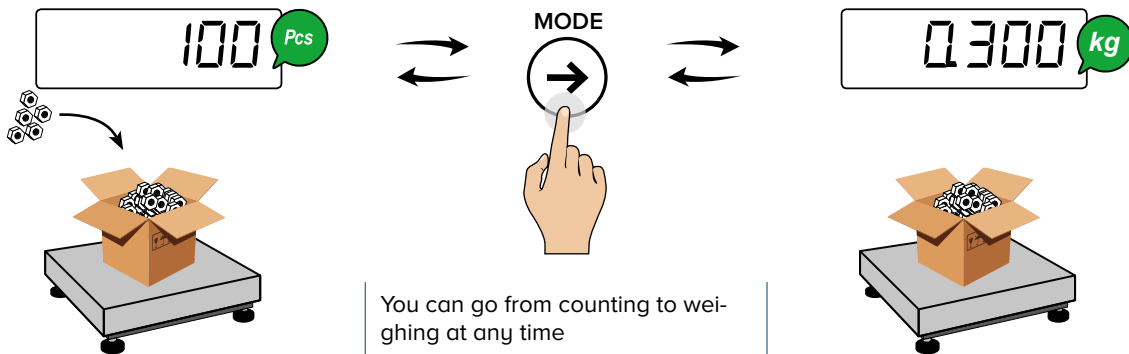

      How to enter the average unit weight (PMU)

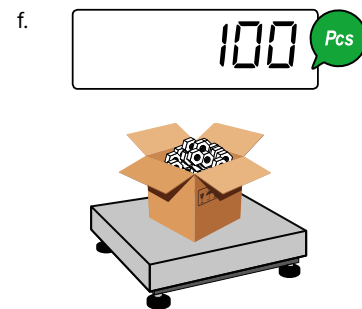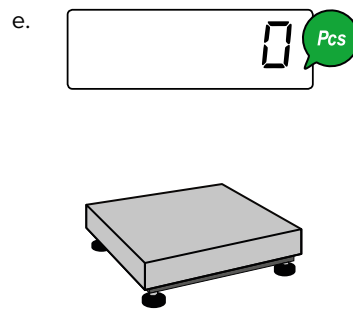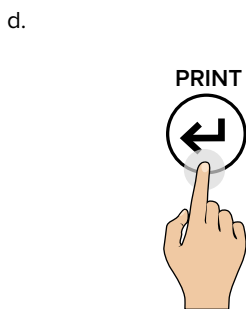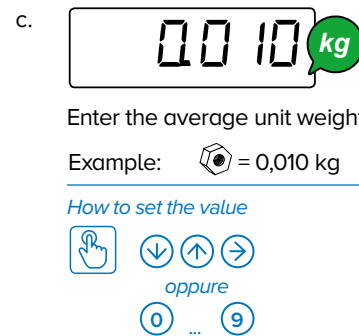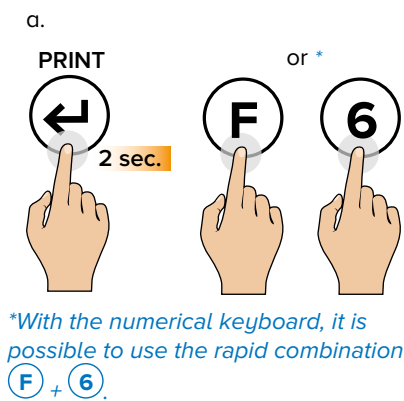


For correct counting, you must set the known tare value or tare the empty container and fill it with the pieces to count.



COUNTING - CoUnt

Pieces counting of the total load

 a.

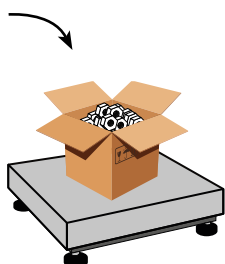


b. Insert the tare value



How to set the value



 c.

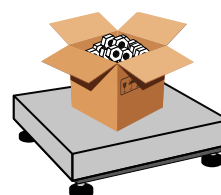

d.

e.

 
Select the desired reference quantity (5, 10, 20, ... 200 pieces)

How to set the value



With the numerical keyboard, the combination of the **F** + **5** keys allows to type the desired quantity (in any amount).

f. Take the samples (5, 10, 20, 30, 40, 50, 60, 75, 100, 200 pezzi).

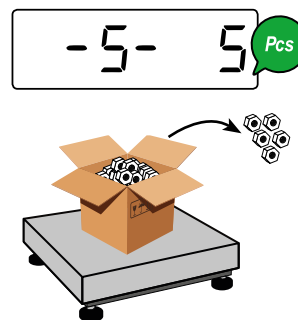


g.

h.

Sampling in progress, please wait...

* With the numerical keyboard, the combination of the **F** + **7** keys allows to modify the sampling time. The more the time, the more the sampling precision.

 i.

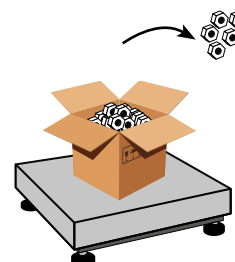






WEIGHT CHECK - CHECK

How to start the check with known reference weight

  a. 

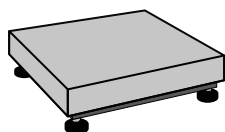


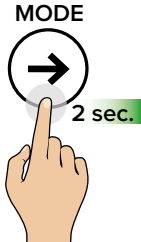
b. 

 c. 

d. 

 How to set the value





e. 

f. 

Enter the lower tolerance

 How to set the value





g. 

h. 

Enter the higher tolerance

 How to set the value



i. 

Example 1

To check a weight of 1000 g with +/- 5 g tolerance (that is, between 995 g and 1005 g), set:

t0 1000
L 00005
h 00005

Example 2

 
 
 
 
 
 
To check a weight of 500 g with + 10 g / - 20 g tolerance (that is, between 480 g and 510 g), set:

t0 0500
L 00020
h 00010








WEIGHT CHECK - CHECK

How to start the check with automatic target acquisition

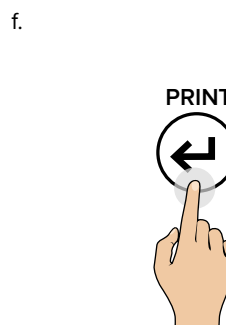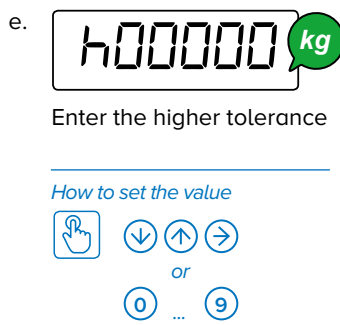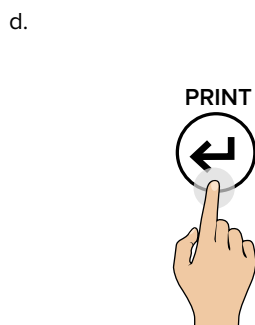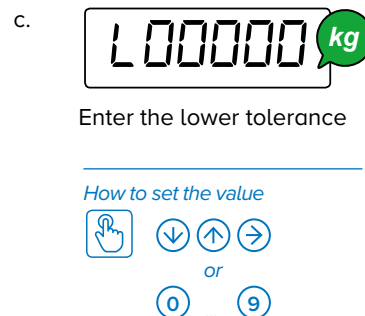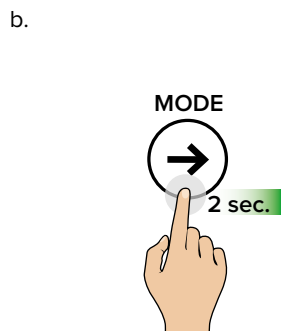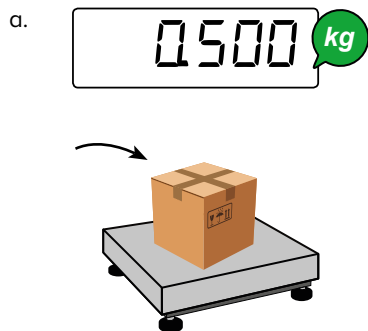




How to check the weight

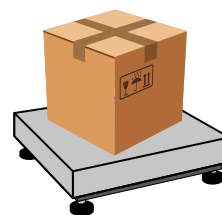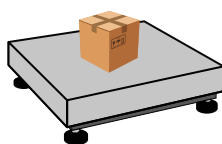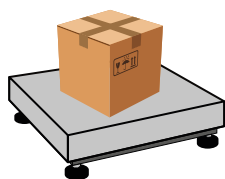     





WEIGHT CHECK - CHECK


 
 
 
How to update the nominal weight with known reference weight

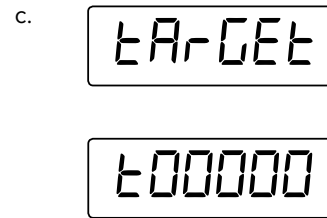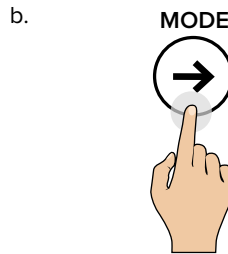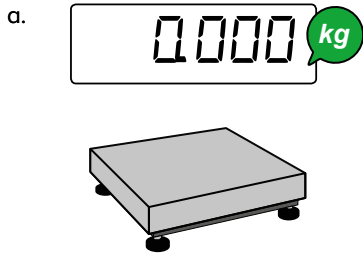

  How to update the nominal weight with automatic target acquisition

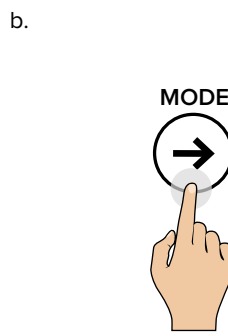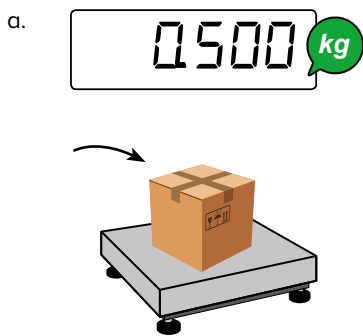


How to edit the check thresholds

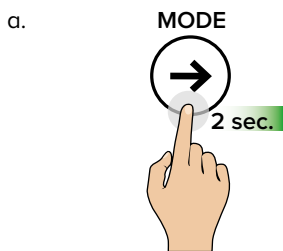    







UNIT OF MEASUREMENT CONVERSION - Converter

 How to convert the unit of measurement into pounds (standard mode)


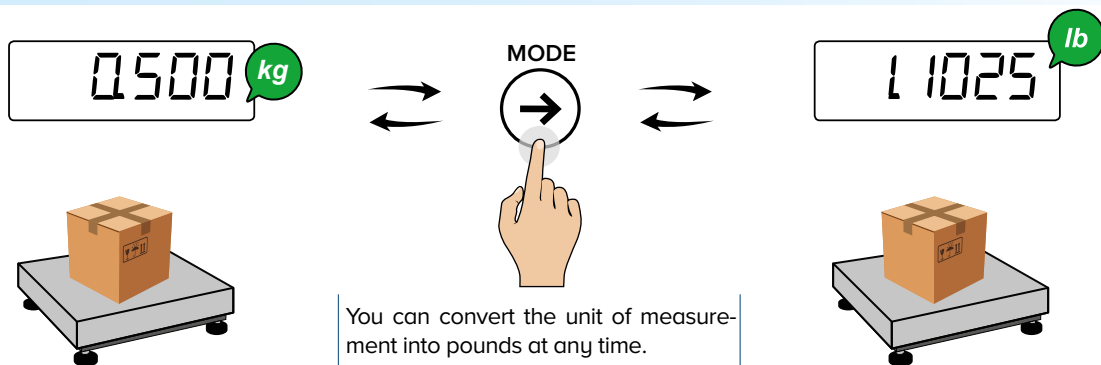


    Converting the unit of measurement with free conversion factor

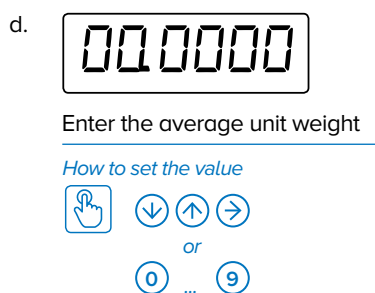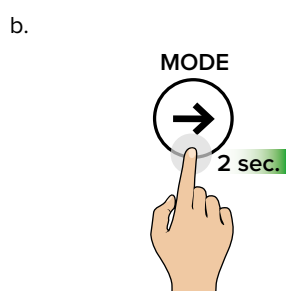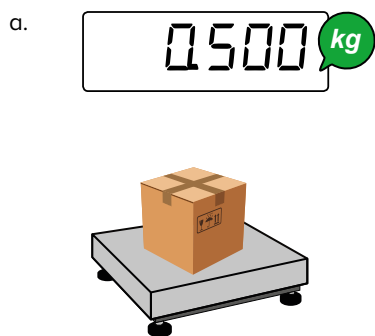

Pounds (lb)	1g = 0.00220
Ounces (oz)	1g = 0.03527
Stones (st)	1g = 0.00016
Karats (kt)	1g = 5.00000
Grains (gr)	1g = 15.43240
...	

  Any conversion factor must be multiplied to the weight.

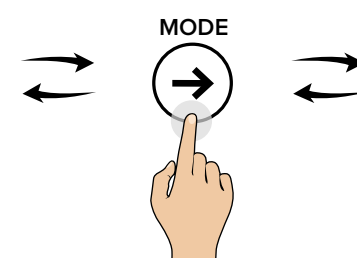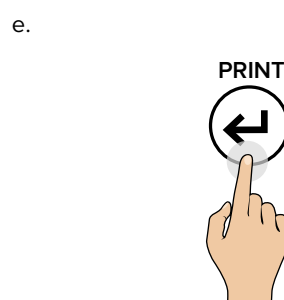







You can convert the unit of measurement with free conversion factor at any time.

PERCENTAGE WEIGHING - PErC





Percentage check

      I. How to acquire the 100% reference

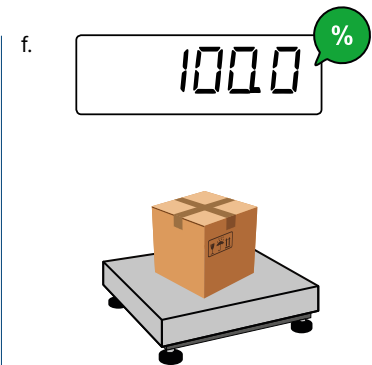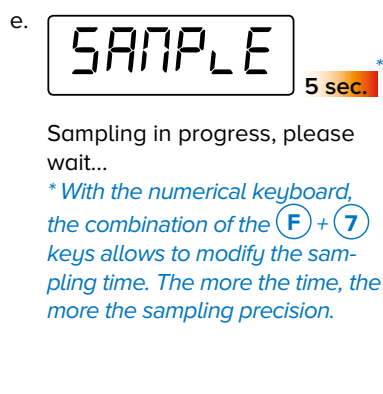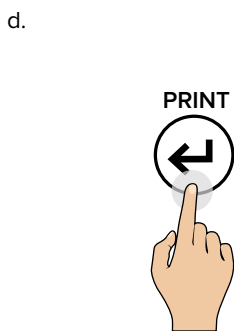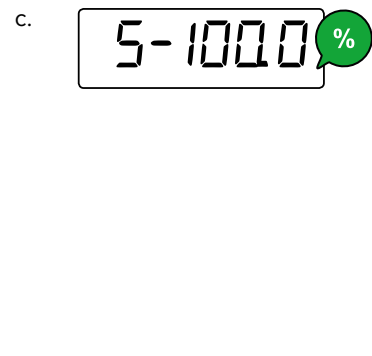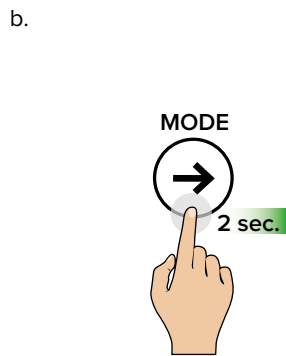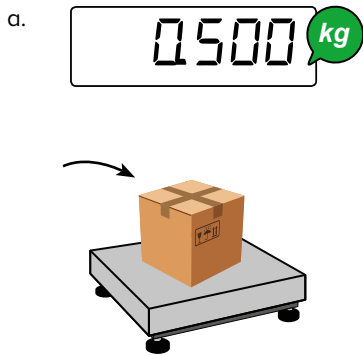

II. How to check the weight

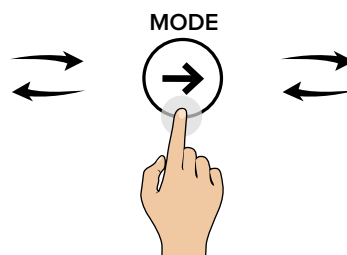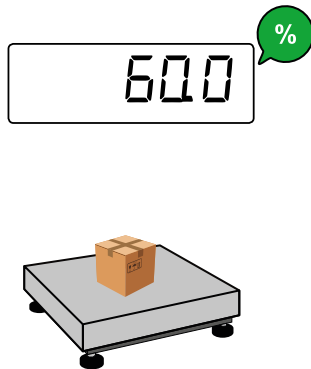  

You can go from weight in % to weight in kg at any time.



 
 
 
 
 
 
 
 
 


PERCENTAGE WEIGHT - PErC









Percentage metering

Example of formula

Product: RP28K
 1. 2127A3 - 50%
 2. 23AB4 - 30%
 3. Water - 20%
Dose 500g

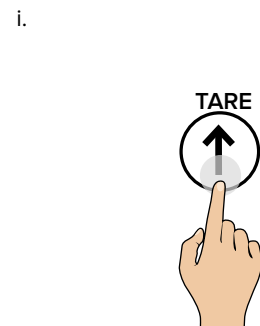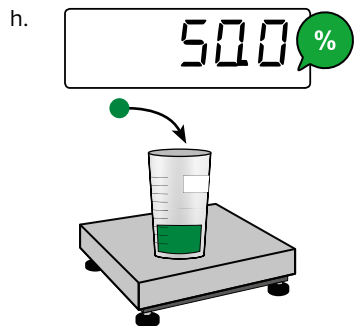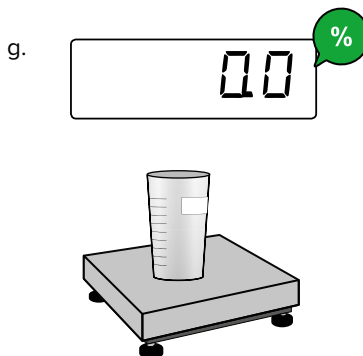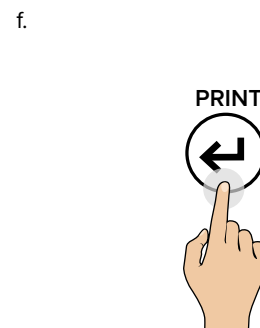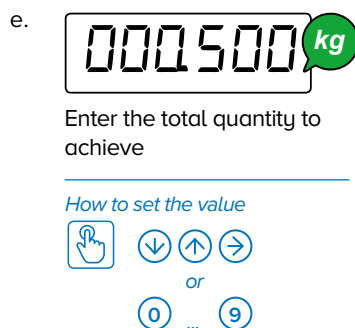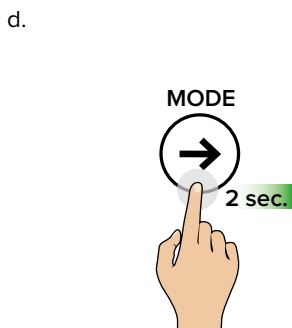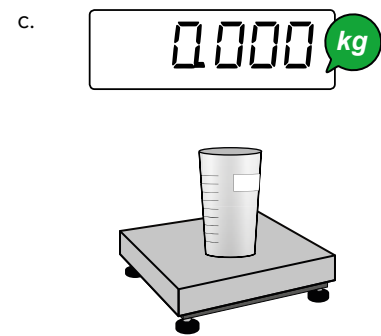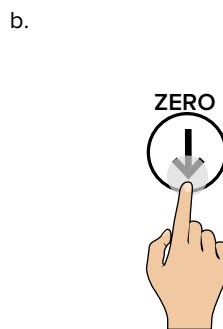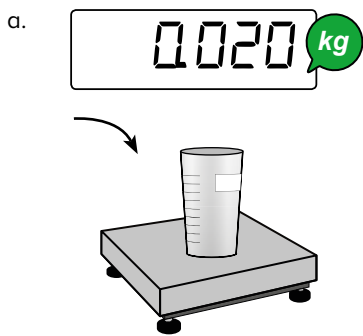

PERCENTAGE WEIGHT - PErC

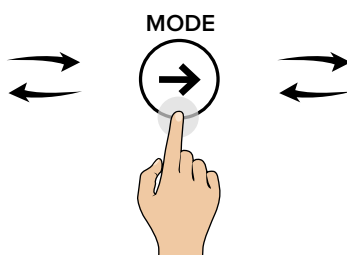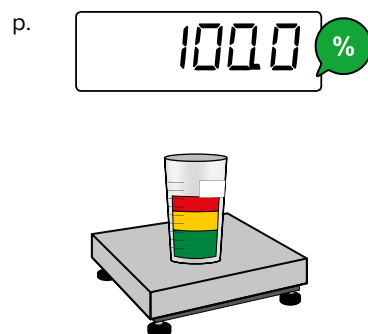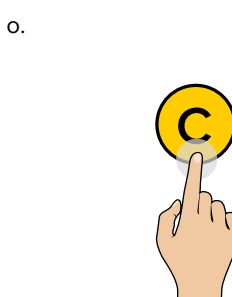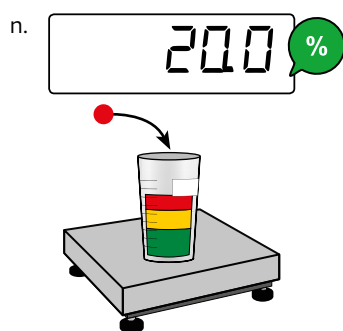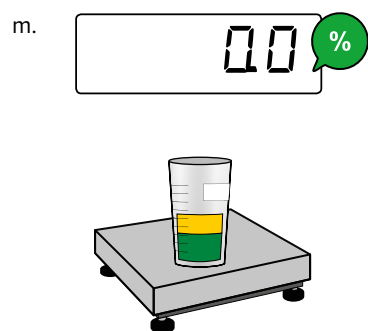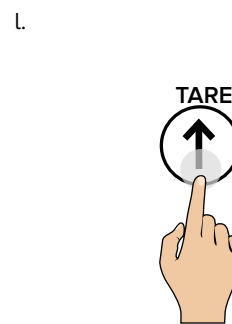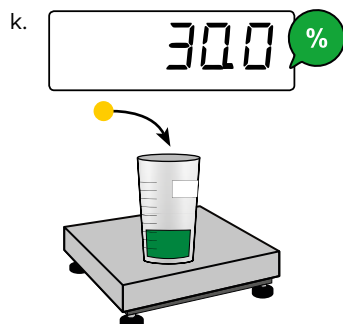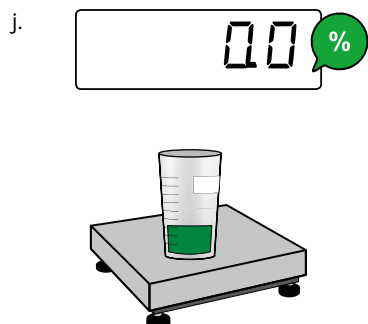        






You can go from weight in % to weight in kg at any time.








HOLDING WEIGHT ON THE DISPLAY - hold

     How to activate the function



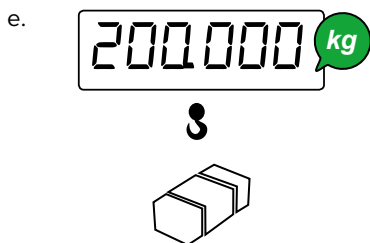
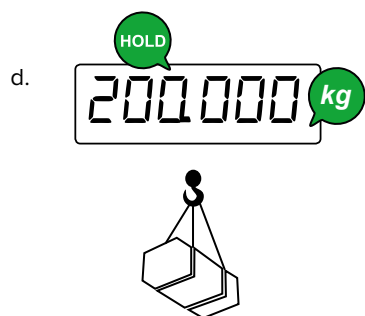
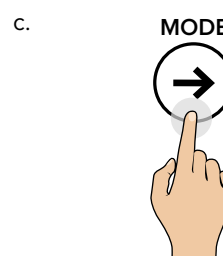
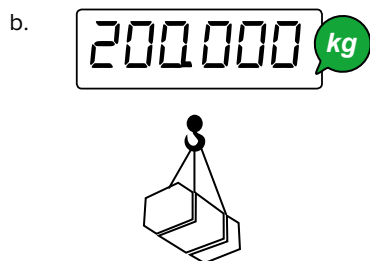
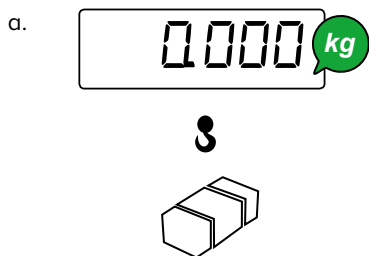


The weight on the display is held even when the scale is unloaded.

   
How to deactivate the function

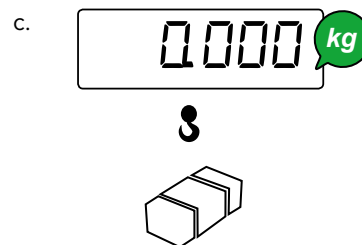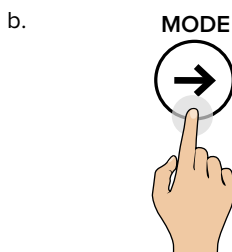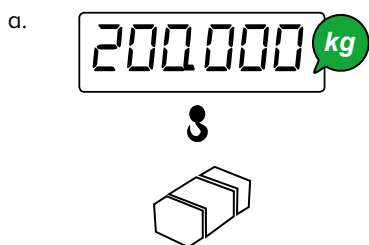

        EXCHANGE BETWEEN NET WEIGHT AND GROSS WEIGHT - *NET.GROSS*

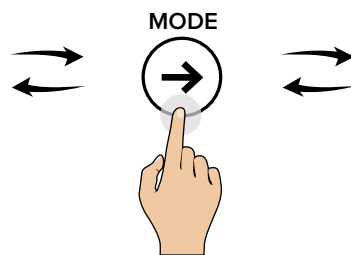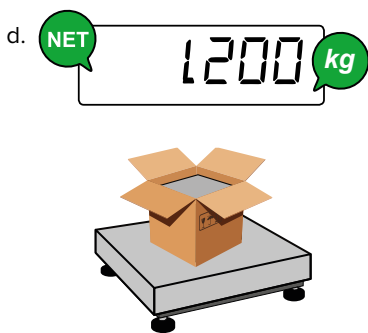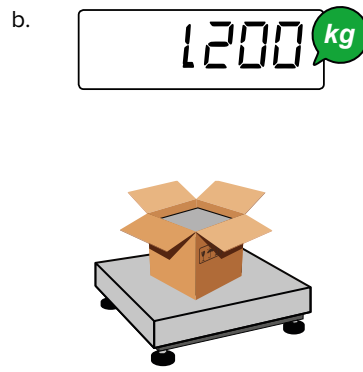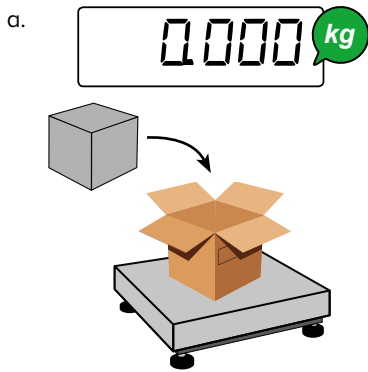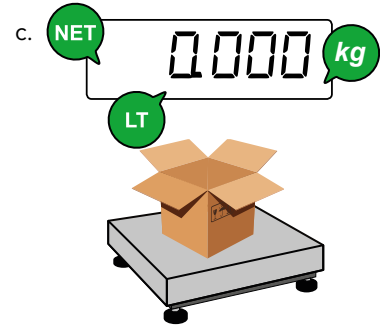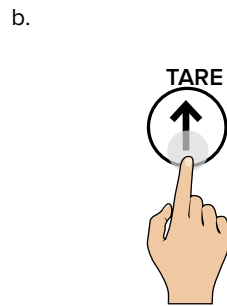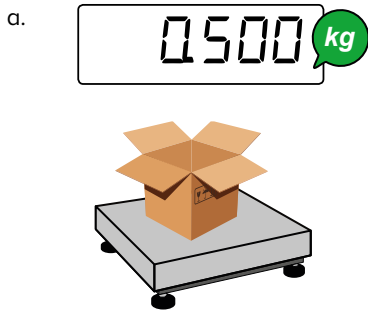

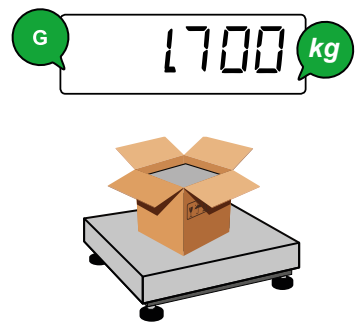

You can go from net weight to gross weight at any time.




CONFIGURATION MENU

HOW TO ACCESS THE CONFIGURATION MENU

a. 

b.  **PRINT**
5 sec.

c. 





The indicator is in the configuration menu.

MENU


How to enter

1. 5 Sec.


How to browse



- ↑ = 
- ↓ = 
- = 
- ← = 


A CLocH	→	
B PrEC 10	1	dAY
C ALib1	2	Month
D SEtPnt	3	YEAr
E FiltEr	4	hoUr
F SCrEEen	5	MinUTE
G tArE		
H AUtoFF		
I onPr in		
J t iHrES		
K rESEt		
L d iAG		

 Visible only if the date/time option is available



CLocH - DATE AND TIME

 
Day

A-1 dAY  00 



 Month 


Month

A-2 Month  00 



YEAr 


Year

A-3 YEAr  00 

 

hoUr 


Hour

A-4 hoUr  00 

MinUTE 


Minute


A-5 MinUTE  00 


dAY 


PrEC. 10 - HIGH RESOLUTION READING DIVISION

This functions allows you to display the weight with ten times greater resolution

B PrEC 10 

no 

YES 

ALib1 

 
MENU

How to enter

1. 5 Sec.



How to browse




- A CLock
- B PrEC ID
- C ALibi**
- D SEtPnt
- E FilTEr
- F SCrEEr
- G tArE
- H AUtoFF
- I onPr in
- J tArES
- K rESEt
- L dIAG

ALibi - ALIBI MEMORY READING



The weighing save ID code is expressed as follows: 00000 - 000000, for example 00001 - 000021.

 The first value is the re-write number, the second value is the weighing identification number.

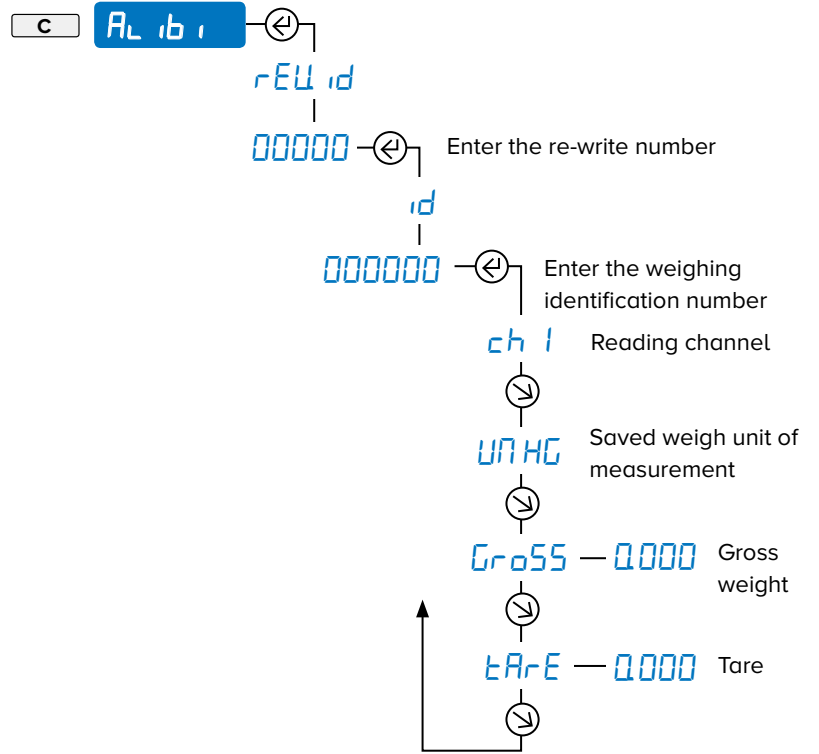


SEtPnt - RELAY PORTS



Visible only if there is an optional board

 Relay port activation/deactivation weights

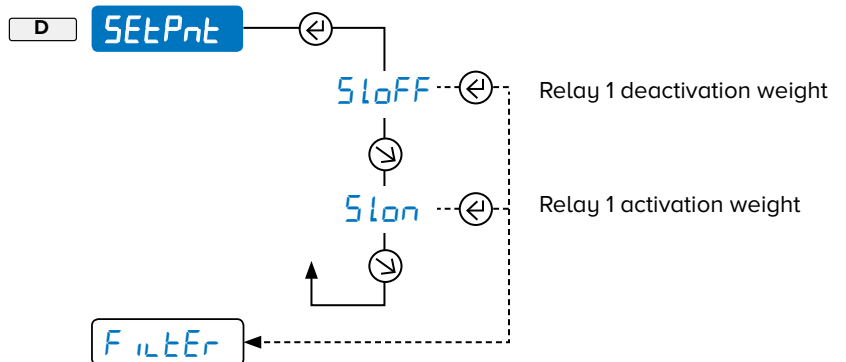

i Repeat the same operation for relays 2, 3 and 4.

MENU

How to enter

1. 5 Sec.



How to browse

- ↑ = (Up Arrow)
- ↓ = (Down Arrow)
- = (Left Arrow)
- ← = (Right Arrow)

- A CLoCk
 - B PrEC 10
 - C AL ib 1
 - D SEtPnt
 - E **FiltEr**
 - F SCrEEen
 - G tArE
 - H AUtoFF
 - I onPr in
 - J t.HrES
 - K rESEt
 - L d iAG
-
- 1 StAnd0
 - ...
 - 4 StAnd3
 - 5 h irES0
 - ...
 - 12 h irES7
 - 13 dYn0
 - ...
 - 16 dYn3
 - 17 SLoU0
 - ...
 - 20 SLoU3
 - 21 doS0
 - ...
 - 24 doS3
 - 25 r.AdC 0
 - ...
 - 28 r.AdC 5

FiltEr - WEIGHING FILTERS



Edits scale reactivity.

Useful in optimising weighing to your needs.



With the approved instrument, you can select only some of the filters listed below.

Premise

The "0" represents minor filtering incidence.

Increasing the incidence give the weight more stability.


 
We recommend weighing several times, changing the incidence until you obtain the best compromise between reactivity and stability.

Table and floor scales and piece counters

E-1 StAnd0

...

 E-4 StAnd3

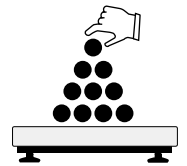

High precision scales

E-5 h irES0

...

E-12 h irES7



Suspended and oscillating load weighing

E-13 dYn0

...

E-16 dYn3

 
 


Liquid weighing, weighbridges and weighing with vibrations

E-17 SLoU0

...

E-20 SLoU3



Metering, filling, level check and overloads

E-21 doS0

...

E-24 doS3



Auto



Manual

Filter for specific applications for use by the manufacturer

E-25 r.AdC 0

...

E-28 r.AdC 5

MENU

How to enter

1. 5 Sec.



How to browse

- ↑ = (up arrow)
- ↓ = (down arrow)
- = (left arrow)
- ← = (right arrow)

A **CLock**

B **PREC 10**

C **ALibi**

D **SEtPnt**

E **FILtEr**

F **SCREEN**

G **tArE**

 
H **AutoFF**

I **onPr in**

J **tHrES**

K **rESEt**

L **dAG**



1 **bAHL it**

2 **br iGht**

 
3 **LoCH**

4 **CoLoUr**


SCREEN - ADJUSTING THE DISPLAY




Backlighting

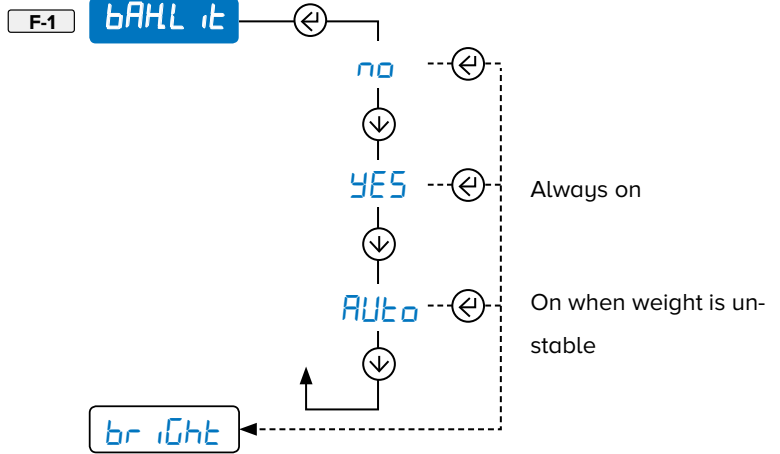


Brightness

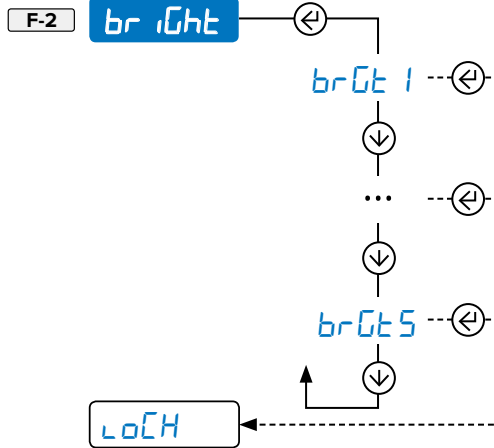 

 Display lock (for use by the manufacturer)

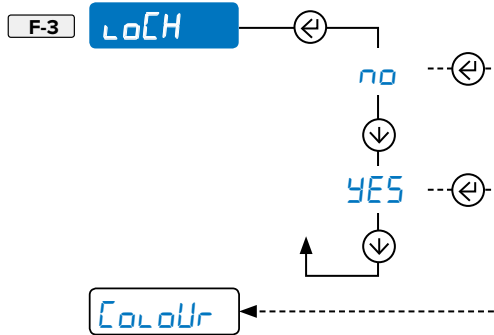

Backlighting colour

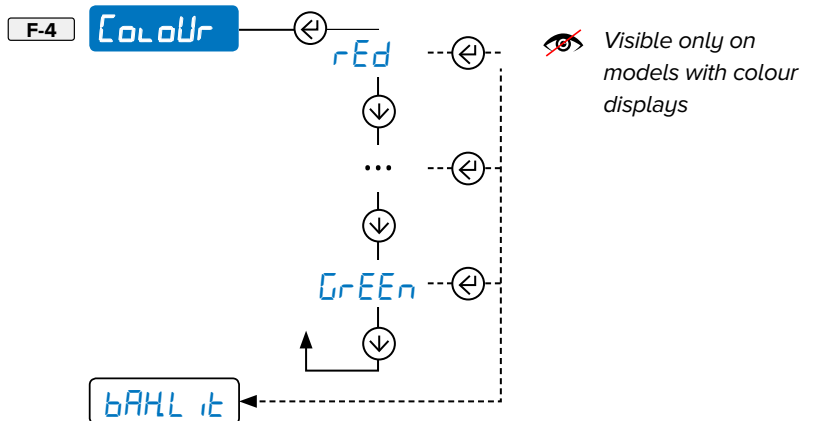 

MENU

How to enter

1. 5 Sec.



How to browse

- ↑ = (up arrow)
- ↓ = (down arrow)
- = (right arrow)
- ← = (left arrow)
- ← = (C key)

A **CLocH**

B **PrEC 10**

C **ALib1**

D **SEtPnt**

E **FILtEr**

F **SCrEEEn**

G **tArE**

H **AUtoFF**

 
I **onPr in**

J **t.HrES**


K **rESEt**

L **d.IAG**


tArE - TARE

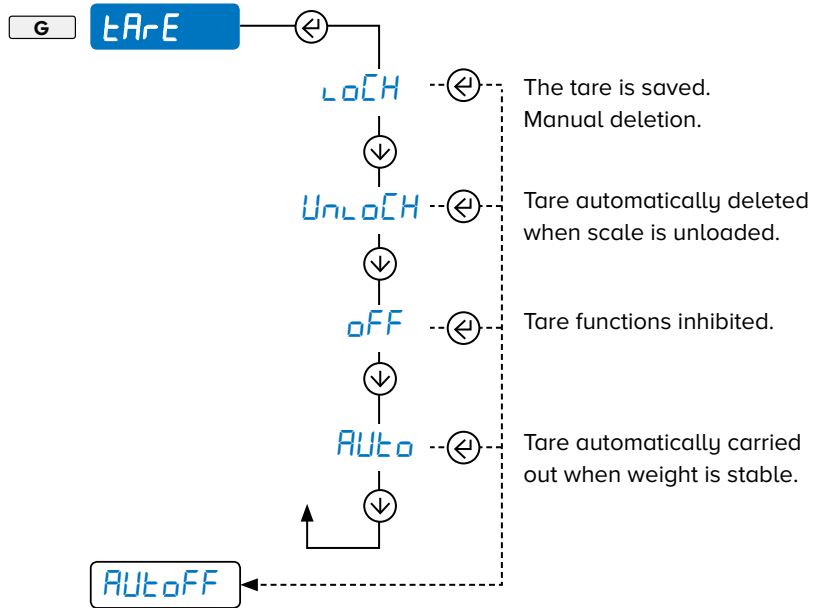

AUtoFF - AUTOMATIC SWITCHING OFF

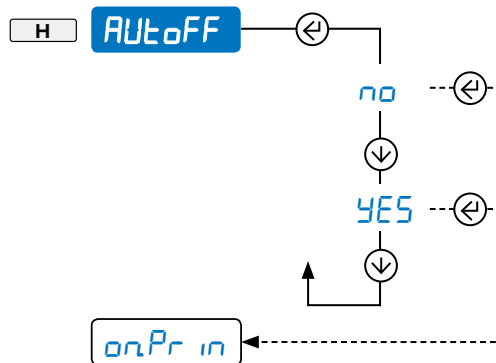 

onPr in - MANUAL PRINTER SWITCHING ON

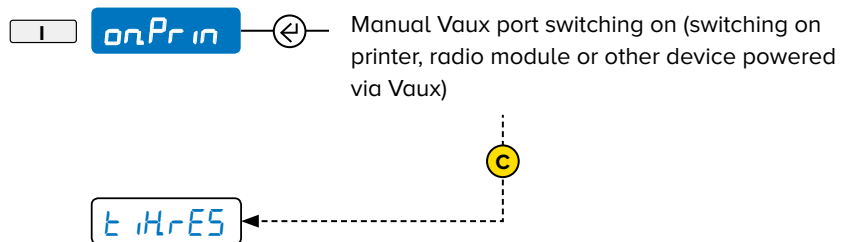 


MENU

How to enter

1. 5 Sec.




 How to browse




- A CLocH
- B PrECID
- C ALib1
- D SEtPnt
- E FilTEr
- F SCrEEr
- G tArE
- H AUtoFF
- I onPr in
- J tHrES
- K rESEt
- L d,AG

 tHrES - TICKET NUMBER RESET



rESEt - FACTORY CONFIGURATION RESET

 

d,AG - DIAGNOSTICS



L d,AG - Reserved for technical staff.

FAQ

PRINT

The scale does not print

- Another printout is already in progress (bUSy)
- Make sure there is a roll in the printer
- The printer does not switch on
- The weight is unstable (UNStAb)
- The net or gross weight is negative or is insufficient for printing (LoL!)
- Underload or overload (----- o -----) (Un. oUEr)
- The scale was not loaded after the last printing (no. 0. UN5)
- You are trying to print a non-approved weight

ACCUMULATION

The scale does not accumulate

- Make sure there is a roll in the printer
- The printer does not switch on
- The weight is unstable (UNStAb)
- The net or gross weight is negative (LoL!)
- Underload or overload (----- o -----) (Un. oUEr)
- The scale was not unloaded after the last printing (no. 0. UN5)
- The weight is insufficient for weighing (LoL!)
 - less than 10 divisions for the accumulator modes
 - less than "Min" for the approved products (shown on the measuring plate)

The scale has lost the total

- Switching off the scale causes the accumulated totals to be lost.

TARE

The scale does not tare

- The weight is unstable (UNStAb)
- The gross weight is negative (LoL!)
- The weight is insufficient
- The weight exceeds the maximum capacity
- The tare function has been deactivated
- In the event of manual tare, the value exceeds the maximum capacity.

WEIGHING

The scale does not switch on

- Make sure the power cable is connected properly
- Connect the battery charger and try again. If the instrument continues to malfunction, contact the dealer.

The scale switches off suddenly

- Automatic switching off active
- Low battery
- Battery failure
- Power supply line failure

The scale is not reactive

- One of the available energy saving modes has been activated
- An unsuitable weighing filter has been selected

The scale display switches off and displays a dot

- Stand-by mode is active: press a key to reactivate weighing.
- Energy saving mode is active: contact the dealer for further details.

The scale displays a permanent "Err" message

- The scale is unable to automatically reset the weight because it exceeds the maximum resettable weight at switch-on.
- Unload the scale and try again. If the scale continues to have the same problem even when there is nothing on it, contact the dealer.

The weight is unstable

- Check the active weighing filter.
- If the support surface is subjected to vibrations from machinery or moving vehicles, move the scale onto another surface and try again.

PIECE COUNTER

The scale does not carry out sampling

- The weight is unstable (Err. NoE)
- The weight is insufficient, add more pieces and try again (Error)

ERROR MESSAGES

MESSAGE	DESCRIPTION	SOLUTION
<i>bUSY</i>	Another printout is already in progress	Wait for the printout in progress to be finished and try again.
<i>UnStAb</i>	The weight is unstable	Check the weighing filter. If the support surface is subjected to vibrations from machinery or moving vehicles, move the scale onto another surface and try again.
<i>LoW</i>	The net or gross weight is negative or insufficient for printing	Add weight and try again.
<i>Un. ouEr</i>	Underload or overload (<i>_____o_____</i>)	Restore a valid weight condition. If the problem persists, contact customer service.
<i>no. 0. UnS</i>	The scale was not unloaded after the last printing	Completely unload the scale, making sure the →0← light comes on. Reload the weight and try again.
<i>Err. Not</i>	The weight is unstable	Wait for stability (the <i>~</i> light) and try again.
<i>Error</i>	In piece counting mode, the weight is insufficient for proper sampling.	Add more pieces and try again.





© Rice Lake Weighing Systems Europe B.V. Specifications subject to change without notice.
Rice Lake Weighing Systems is an ISO 9001 registered company.

NL-6666 MH Heteran • Netherlands
TEL: +31 (0)26 472 1319 • FAX: +31 (0)88 234 9100