

Ishida AC-4000 Series ROM Switch
Firmware B0401x

ROM Switch – Test Mode (C06)

October 2004

Items of interest are marked by *

Address	Function	Data (Default for firmware B0401L)
0	Decimal Point Position, Weight (lb) [Lower weight range: less than 15 Lb]	4 (Default)
1	Decimal Point Position, Total Price (lb)	3 (Default)
2	Decimal Point Position, Unit Price (lb)	3 (Default)
3	DC motor control	41 (Fixed)
4	Total Mode Accumulation of Piece Count for Fixed Price Items	0: Count number of labels printed (Default) 1: Count number of pieces on labels
5*	Unit Pricing method	0: \$/lb, \$/kg (Default) 1: \$/100g
6	Total Price rounding method	0: 4-5 round (Default) 1: 0/5 round
7*	Shelf Life Calculation. Does Shelf Life include the pack day or begin counting from the next day?	0: Include pack day 1: Count from the next day (Default)
8	Time Rounding	0: 00 minutes (Default) 15: 15 minutes 30: 30 minutes
9	Print PLU Description on Sub-Total label	0: No (Default) 1: Yes
10*	RESET key operation	00: Enable (Default) 01: Disable
11	Clear Totals After Transmitting	0: Do Not Clear (Default) 1: Clear
12-13	N/A	
14	Weighing unit	0: kg 1: lb (Default)
15	Price Rounding	0: 0.00x cut off (Default) 1: 0.00x round off 2: 0.0x cut off 3: 0.0x round off
16	ITF Barcode Check Digit Calculation	0: 3131... three multiple for odd digits (Default) 1: 1313... three multiple for even digits
17	Thermal Head Fault Detection	0: Off (Default) 1: On
18	Thermal Head Fault Detection Timing	0: at PLU recall FF: when return to normal mode from any mode (Default)

Ishida AC-4000 Series ROM Switch
Firmware B0401x

Address	Function	Data (Default for firmware B0401L)
19	Thermal Head Fault Detection Method	0: when ever thermal head has damage 1: only with additional damage (Default)
20	Dummy Price on PLU List labels	0: \$1.00 (Default) 1: \$0.00
21*	Commodity Name Line Display	0: First line only 1: First two lines (Default)
22	Batch Number Printing	0: Disable (Default) 1: Enable
23	Operator Log On	0: Disable (Default) 1: Enable
24	Fixed Price with Random Weight Sales Mode	0: Disable 1: Enable (Default)
25*	Date Printing selection for @/for Item (Fixed Price)	00: Both 01: Pack Date only 02: Expire Date only (Default) 03: No Date Print
26	Barcode Printing	0: Enable (Default) 1: Disable
27	Print Labels with Zero Price	0: Enable (Default) 1: Disable
28	Re-Printing	0: Yes (Default) 1: No
29	Price Currency Symbol	0: None 1: \$ (Default)
30*	Auto Convert Sales Mode: Weighed → Fixed Price	0: Prohibit (Default) 1: Allow
31	Save Key operation	0: Enable (Default) 1: Disable
32*	Accept Print Key @ Unstable Weight	0: No 1: Yes (Default)
33	Print Void Key Confirmation Label?	0: No (Default) 1: Yes
34*	Barcode OCR Print Format	0: EAN 1: UCC (Default)
35	Operator Logout Method	0: No logout (Default) 1: After each transaction
36	Printing at Zero Price	0: Barcode = 0, Price = 0 (Default) 1: No Barcode, Price = 0 2: No Barcode, No Price

Ishida AC-4000 Series ROM Switch
Firmware B0401x

Address	Function	Data (Default for firmware B0401L)
37-39	N/A	
40	Temporary date change selection Note: In operation mode "9999" entry disables date printing.	0: Pack Date (Default) - MMDDYY: change Pack Date - Enter number of days: change Shelf Life 1: Sell By Date* - MMDDYY: change Sell By Date * Only available from version B0401L
41	Scroll Message Timer (seconds)	8 (Default)
42	Decimal Point Position, Weight (lb) [Upper weight range: more than 15 Lb]	3 (Default)
43	Sub-Total label Print	0: Grand Total only (Default) 1: Item Total only 2: Both
44	Clear Sub-Total Data	0: All (Default) 1: Printed Item only
45	Barcode, Unit Price, Total Price Print	0: Print (Default) 1: No Print
46	Julian Date Print	0: Refer to PLU Date Print Flag (Default) 1: Always Print
47-55	N/A	
56	Printer Motor Drive Direction	0: Refer to Model (step C08) (Default) 1: Forward [label] 2: Reverse [cassette]
57	Automatic Word Wrap Setting by 0.1 mm	2 (Fixed)
58	N/A	
59	Auto/Manual Start Up Print Mode	0: Manual Print (Default) 1: Auto Print
60	Frame Printing for Test Labels by Character	0: Off (Default) 1: On
61*	Frame Printing for Test Labels by Print Item	0: Off (Default) 1: On
62	N/A	
63*	AC-4000H Rear Display	0: Off (Default) 1: On

Ishida AC-4000 Series ROM Switch
Firmware B0401x

Operation

- 1) Enter Test Mode
- 2) Press 6, ENTER

C00

C06-00

0

4

0

Display

Test Mode

ROM Switch

Input data

Current data

ROM Switch address

- 3) To change ROM Switch address

Increase: UP ARROW key, or RIGHT ARROW key.

Decrease: DOWN ARROW key, or LEFT ARROW key.

Note: to jump, enter address and press LEFT ARROW key.

- 4) To change ROM Switch data

Key in data in hexadecimal format and press ENTER key.

- 5) Press END and cycle the power OFF / ON to return to Normal Operation mode.